

INSTALLATION, OPERATING & MAINTENANCE INSTRUCTIONS

Type L End Suction Pumps

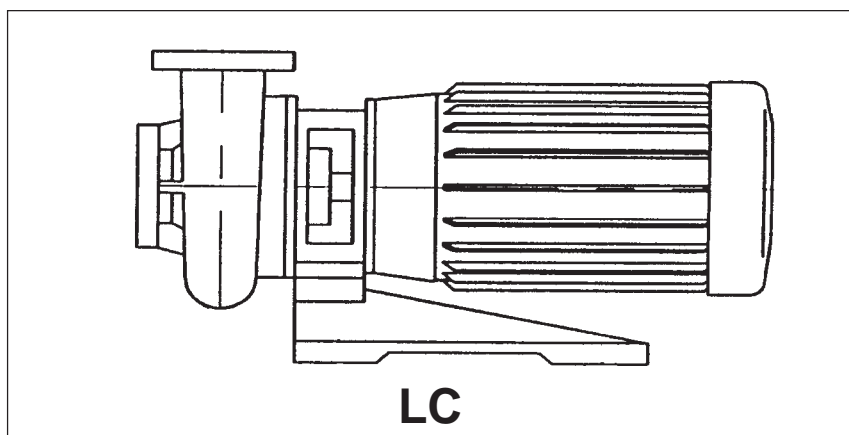
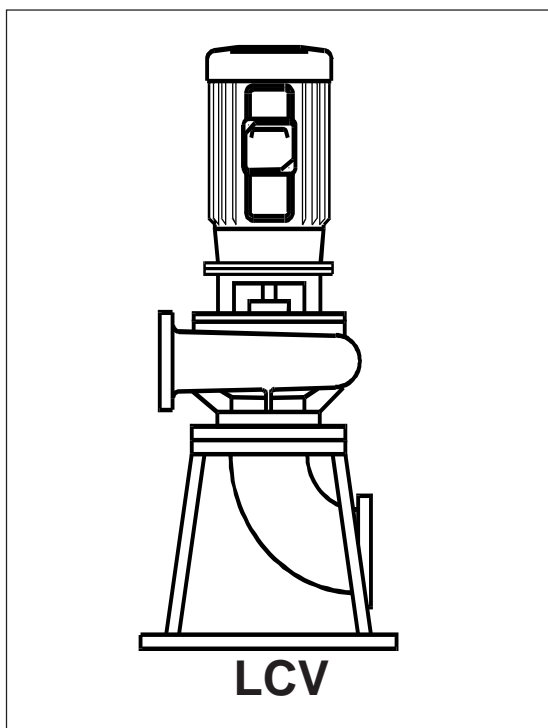
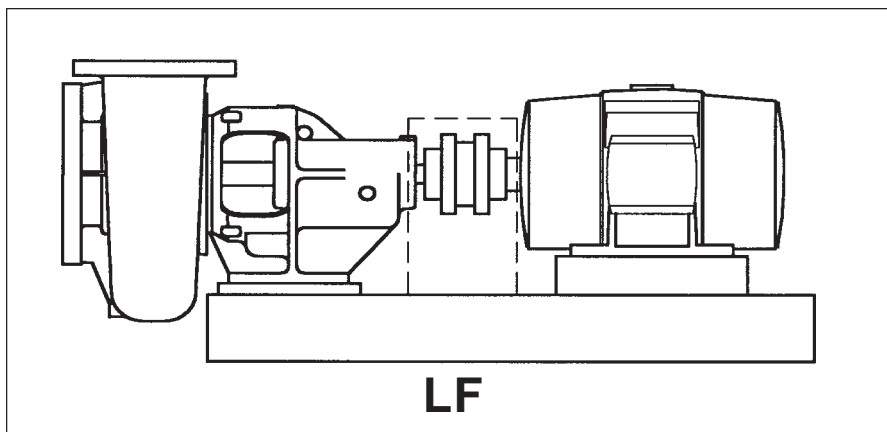


TABLE OF CONTENTS

I. INSTALLATION MECHANICAL

A. Pump Identification 3
B. Receiving 3
C. Temporary Storage 3
D. Location 3
E. Horizontal Pump Foundation 3
F. Securing The Base Plate 4
G. Vertical Pump Mounting 4
H. Piping-General 4
I. Suction (Inlet) Piping 4-5
J. Discharge (Outlet) Piping 5
K. Shaft Sealing-General Comments 5
L. Packing Gland Adjustments 5
M. Mechanical Seals 5-6
N. Coupling Alignment 6

II. INSTALLATION-ELECTRICAL

A. Motors, General 6-7
B. Installation Wiring 7

III. OPERATION

A. Priming 7
B. Pre-Start Checklist 7-8
C. Motor Rotation 7
D. Starting The Pump 8
E. Voltage Regulation 8
F. Pump Shutdown 8
G. Short Duration Shutdown 8
H. Extended Period Shutdown 8-9

IV. MAINTENANCE

A. Motor Lubrication 9
B. Pump Lubrication 9
C. Disassembly of Pumps 10
D. Reassembly of Pumps 10

V. ORDERING PARTS 11-12

VI. TROUBLE SHOOTING

A. Symptoms 12
B. Possible Causes 13-14

VII. WARRANTY 15

VIII. SALES AND SERVICE CENTERS 15

CAUTIONS and WARNINGS are inserted at key points of this manual to provide check points for personnel and machinery safety. CAUTIONS: Apply to personnel. WARNINGS: Apply to personnel and machinery.

I. INSTALLATION-MECHANICAL

Read these instructions thoroughly before installing and operating your PACO Type L Centrifugal Pump.

Successful operation depends on careful attention to the procedures described in Sections I, II, III and IV of this manual. Keep this instruction manual handy for future use.

A. PUMP IDENTIFICATION

- All PACO Pumps are identified by Catalog and Serial Numbers. These numbers are stamped on the pump nameplate (Fig. 1 a) affixed to each pump volute casing, and should be referred to in all correspondence with the Company.

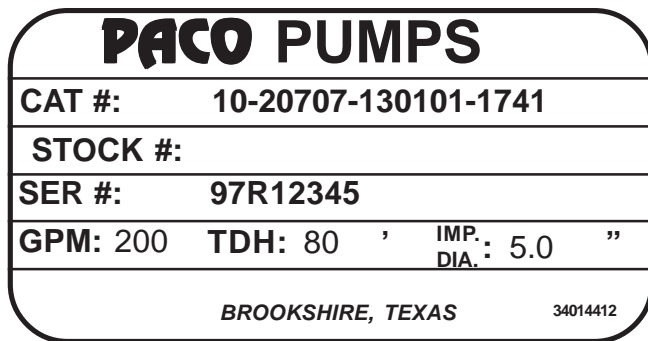


FIGURE 1a

B. RECEIVING

- Check pumping unit for shortage and damage immediately upon arrival. Pump accessories when required are packaged in a separate container and shipped with the unit.
- If equipment is damaged in transit, promptly report this to the carrier's agent. Make complete notations on the freight bill to speed satisfactory adjustment by the carrier.
- Unload and handle the unit with a sling. **Do not lift unit by eye bolts on the motor!**

C. TEMPORARY STORAGE

- If pump is not to be installed and operated soon after arrival, store it in a clean, dry area of moderate ambient temperature.
- Rotate the shaft by hand periodically to coat bearing with lubricant to retard oxidation and corrosion.

- Follow motor manufacturer's storage recommendations where applicable.

D. LOCATION

- Locate the pump as close to the suction supply as possible. Use the shortest and most direct suction piping practical. Refer to paragraph H. **SUCTION (INLET) PIPING.**
- Locate the pump below system level wherever possible. This will facilitate priming, assure a steady liquid flow, and provide a positive suction head.
- Make sure sufficient NPSH (Net Positive Suction Head) is provided at the suction end by considering the pump's location in relation to the entire system. Available NPSH must always equal or exceed required NPSH specified on the pump performance curve.
- Always allow sufficient accessibility for maintenance and inspection. Provide a clear space with ample head room for use of a hoist strong enough to lift the unit.
- Make sure a suitable power source is available for the pump motor. Electrical characteristics should match those specified on the motor data plate, within the limits covered in Sections II and III.
- Avoid pump exposure to sub-zero temperatures to prevent pump liquid from freezing. If freezing conditions exist during shutdown periods, see Sections IIIE and IIIF for specific recommendations.

E. HORIZONTAL PUMP FOUNDATION

- Horizontal pumps should be permanently installed on a firm, concrete foundation mounting pad of sufficient size to dampen any vibration and prevent any deflection or misalignment. The pad may float on springs or be a raised part of the equipment room floor. The foundation should be poured without interruption to 3/4 to 1-1/2 inches below the final pump elevation. The top surface should be well scored or grooved before the concrete sets to provide a suitable bonding surface for the grout. Anchor bolts should be set in pipe sleeves for positioning allowance, as shown in (Fig. 2a) on page 4. Allow enough bolt length for grout, lower base plate flange, nuts and washers. Allow the foundation to cure several days before proceeding with pump installation.

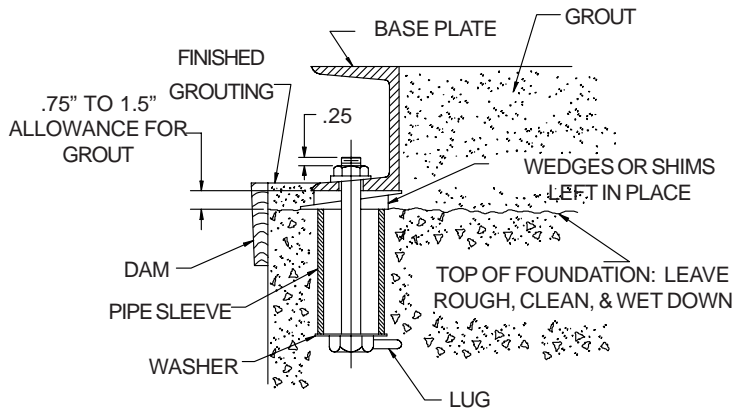


FIGURE 2a: Anchor Bolt Installation

F. SECURING THE BASE PLATE

- After the concrete pad has been poured and set, lower the pump base plate over the anchor bolts and rest it on loose adjustment wedges or shims placed near each anchor bolt and at intervals not to exceed 24" along each side.

Shims or wedges must be placed to raise the bottom of the base 3/4" to 1-1/4" above the pad, allowing clearance for grout. Level the pump shaft, flanges, and base plate using a spirit level, adjusting the wedges or shims, as required.

- Check to make sure that the piping can be aligned to the pump flanges without placing any strain on either flange.
- After pump alignment has been established, put nuts on foundation bolts and tighten them just enough to keep the unit base plate from moving. Construct a form or dam around the concrete pad and pour grout in and around the pump base, as shown in (Fig. 2a). Grout compensates for uneven foundation, distributes the weight of the unit, and prevents shifting. Use an approved, nonshrinking grout (such as Embeco 636 by Master Builders, Cleveland, Ohio or equivalent). Allow at least 24 hours for this grout to set before proceeding with piping connections.
- After the grout has thoroughly hardened, check the foundation bolts and tighten if necessary. Recheck the pump alignment after the foundation bolts are secured.

G. VERTICAL MOUNTING INSTRUCTIONS

The PACO LCV Vertical Close Coupled pump need not be grouted to its foundation, but should be anchored with 4 anchor bolts set in concrete similar to the horizontal anchoring arrangement (Fig. 2a).

H. PIPING-GENERAL

- **Do not use pump as a support for piping!** Use pipe hangers or other supports at proper intervals to provide complete piping support near the pump.
- Both suction and discharge piping should be independently supported and properly aligned so that no strain is transmitted to the pump when flange bolts are tightened.
- Make sure piping is as straight as possible, avoiding unnecessary bends and fittings. Where necessary, use 45° or long-sweep 90° pipe fittings to decrease friction loss.
- Where flanged joints are used, make sure that inside diameters properly match and mounting holes are aligned.
- **Do not spring or force piping when making any connections!**

I. SUCTION (INLET) PIPING

The sizing and installation of suction piping is particularly important. It must be selected and installed in a manner that minimizes pressure loss and permits sufficient liquid flow into the pump during starting and operation. Many NPSH problems can be traced directly to improper design of suction piping systems. Observe the following precautions when installing suction piping:

- Suction piping should be as direct as possible, and ideally the length should be at least ten times the pipe diameter. Short suction piping can be the same diameter as the suction opening. Longer piping should be one or two sizes larger (depending on length), reducing to the diameter of the pump suction opening.

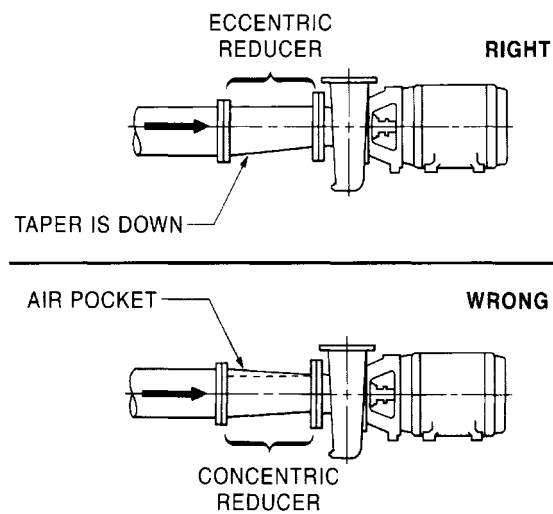


FIGURE 3a

- Use an eccentric reducer, with the eccentric side down (Fig. 3a) when reducing the pipe diameter to the diameter of suction opening.
- **At no point should suction piping be smaller in diameter than the pump suction opening.**
- Horizontal suction lines should follow an even gradient, if possible. A gradual upward slope to the pump is recommended for suction lift conditions, and a gradual downward slope for positive suction head.
- Avoid any high points, such as pipe loops (Fig. 4a), that may create air pockets and throttle the system or produce erratic pumping.
- Install a valve in the suction line to isolate the pump during shutdown and maintenance, and facilitate pump removal. Where two or more pumps are connected to the same suction line, install duplicate gate valves to isolate each pump from the line.
- Gate valves should always be installed in positions that avoid air pockets. Globe valves should not be used, particularly when NPSH is critical.
- During pumping operation, valves on suction line must always be at **FULL OPEN**.
- Properly sized pressure gauges can be installed in gauge taps on pump suction and discharge nozzles. Gauges enable the operator to monitor pump performance and determine that the pump conforms to the parameters of the performance curve. If cavitation, vapor binding, or other unstable operation

occurs, pressure gauges will indicate wide fluctuation in suction and discharge pressures.

J. DISCHARGE (OUTLET) PIPING

- Short discharge piping can be the same diameter as the pump discharge opening. Longer piping should be one or two sizes larger depending on length.
- An even gradient is best for long horizontal runs of discharge piping.
- Install a valve near the discharge opening to prime and start the pump. The discharge gate valve is also used to isolate the pump during shutdown, maintenance, and facilitate pump removal.
- Any high points in discharge piping may entrap air or gas and thus retard pump operation.
- If the possibility of liquid hammer exists, (i.e. check valves are used) close the discharge gate valve before pump shutdown.

K. SHAFT SEALING-GENERAL COMMENTS

- PACO offers both mechanical seals and packed stuffing boxes as a means to seal the shaft. Pumps with stuffing boxes are normally packed before shipment. If the pump is installed within 60 days after shipment, the packing material will be in good condition for operation with a sufficient supply of lubrication. If the pump is stored for a longer period, it may be necessary to repack the stuffing boxes.
- The stuffing box must be supplied at all times with a source of clean, clear liquid to flush and lubricate the packing. When pumps are equipped with mechanical seals, no maintenance or adjustment is required. Mechanical seals are preferred to packing on most applications because they require less maintenance.

L. PACKING GLAND ADJUSTMENT

- With the pump running, the packing gland should be adjusted to permit 40 to 60 drops per minute leakage. This is required for shaft lubrication. After initial start up, additional packing and adjustment may be required. Pumps with mechanical seals require no adjustment.

M. MECHANICAL SEALS

All PACO Type L pumps that are equipped with mechanical seals are matched to conditions for which the pump was sold. Observe the following precautions to avoid seal damage and obtain maximum seal life:


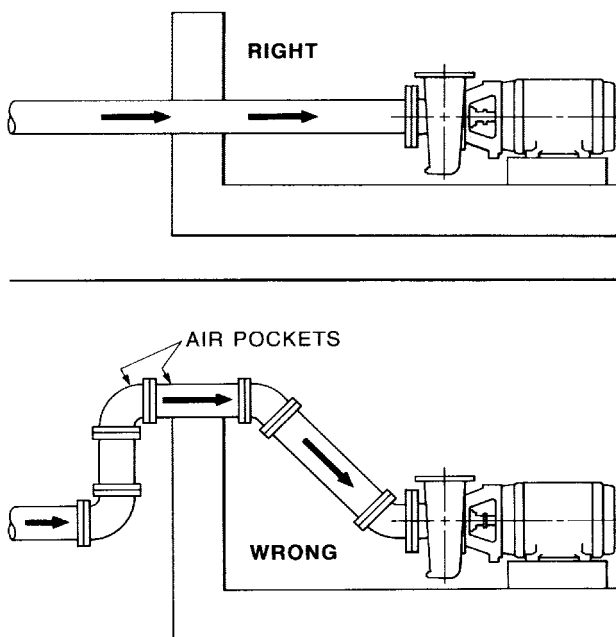


FIGURE 4a

CHECKING ANGULAR ALIGNMENT

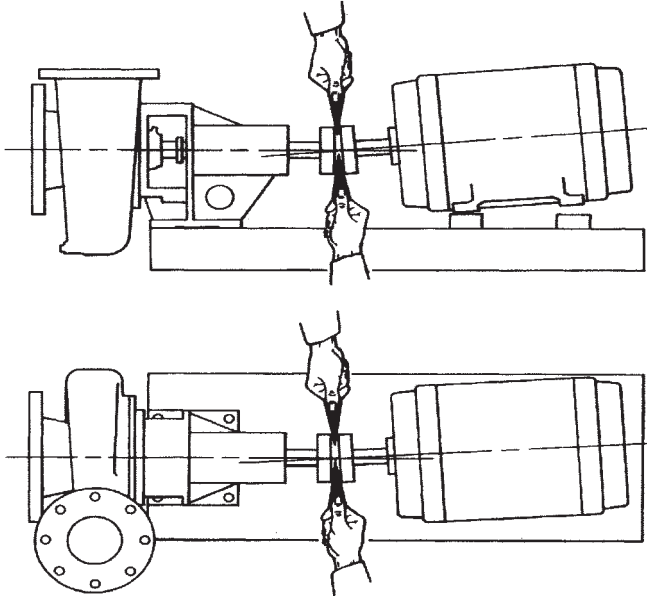

CHECKING PARALLEL ALIGNMENT

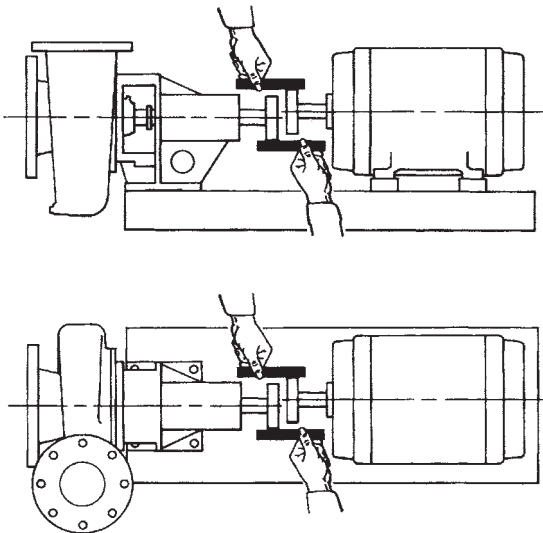


FIGURE 5a: Checking Alignment

- Do not exceed temperature or pressure limitations for the mechanical seal used.
 - **DO NOT RUN THE PUMP DRY OR AGAINST A CLOSED VALVE!** Dry operation will cause seal failure within minutes.
 - Clean and purge suction piping in new installations before installing and operating pump. Pipe scale, welding slag and other abrasives can cause rapid seal failure.
- #### N. COUPLING ALIGNMENT
- The following anchoring and alignment procedure is typical and, if performed with care, should result in a smooth running, trouble-free installation.
 - If the pump and motor were shipped mounted on the pump base as an assembly, remove the coupling guard.
 - The pump and motor were accurately aligned at the factory, but handling during shipment usually alters this pre-alignment. Using a small straight edge and feeler gauges or a dial indicator, check for horizontal, vertical, and angular misalignment of the coupling hubs (Fig. 5a).

- Coupling alignment is proper when the dial indicator reads no more than .005" run out in any direction (or when the straight edge contacts both hubs evenly in both horizontal and vertical positions). If misalignment is detected, loosen the motor and shift or shim as necessary to re-align, then re-tighten bolts. **Always align the motor to the pump as piping strain will occur if the pump is shifted. Never reposition pump on base!**
- After final piping connections to the pump have been made, motor wiring compared, correct rotation has been established, and piping filled with liquid, check shaft alignment once again.
- Leave the coupling guards off until the pump priming procedure is completed for a final shaft alignment check.
- To protect personnel from rotating machinery, **Always install coupling guards after installation is complete; before starting pump!**

II. INSTALLATION—ELECTRICAL

A. MOTORS, GENERAL

The motor control circuit must have the following compo-

nents in order to comply with the National Electrical Code.

- **Motor Disconnecting Device:** A motor disconnecting device must be installed that is capable of disconnecting both the controller (motor starter) and the motor from their source of power.

The disconnecting device must be located so that the controller (motor starter) can be seen from the disconnecting means. In all cases, the distance from the disconnecting device to the controller must be less than 50'.

In most installations the disconnecting device will be a circuit breaker or fusible disconnect switch.

- **Motor short circuit and ground fault protection:**

Short circuit and ground fault protection are usually provided by means of a circuit breaker or fusible disconnect switch.

The selection of the size of the circuit breaker or fuse must be in accordance with Section 430-52 and Table 430-152 of the National Electrical Code.

- **Motor controller with running over current protection (magnetic starter):**

These components must be installed in accordance with applicable local and state electrical codes in addition to the National Electrical Code.

B. INSTALLATION WIRING

- Mount the control panel or motor starter(s) in close proximity to the pump to provide convenient control and ease of installation.
- Wire panel or starter(s) to motor(s) and pilot device(s): Wires to each motor must be sized for at least 125% of the motor nameplate full load amps. AWG #16 Type THW stranded wire is recommended for wiring of pilot devices (float switches).
- Check incoming power source to ensure that it is the same as the voltage and phase of the motors.
- Verify that the starters are suitable to operate the pump motors on voltage and phase that is available.

III. OPERATION

A. PRIMING

- The PACO Type L pump is not self-priming, and must be completely primed (filled with liquid) before starting.
- If the pump will operate with a positive suction head, prime by opening the suction valve and allowing liquid to enter pump casing. Open air vents at this time, and make sure all air is forced from pump by liquid before closing.
- Rotate the shaft by hand to free entrapped air from impeller passageways.
- If pump has a suction lift, priming must be accomplished by other methods. The use of foot valves or ejectors, or manual filling of the pump casing and suction line with liquid are possible methods suggested for this purpose.
- **CAUTION: Never run the pump dry in the hope that it will prime itself!** Serious damage to the mechanical seal will result.

B. PRE-START CHECKLIST

WARNING: In the interest of operator safety, the unit must not be operated above the nameplate conditions. Such operation could result in unit failure causing injury to operating personnel. Consult instruction book for proper operation and maintenance of the pump and its supporting components.

Make the following inspections before starting your Sulzer Type L pump:

- Make sure all wiring connections to the motor (and starting device) match the wiring diagram and produce clockwise rotation as viewed from the back of the motor.
- If the motor has been in storage for an extended length of time, either before or after installation, refer to motor instructions before starting.
- Check voltage, phase, and line circuit frequency with the motor data plate.
- Turn rotating element by hand to make sure it rotates freely.
- Tighten plugs in gauge and drain taps. If pump is fitted with pressure gauges, keep gauge cocks closed when not in use.

- ❑ Check suction and discharge piping for leaks, and make sure all flange bolts are securely tightened.

C. MOTOR ROTATION

CAUTION: *Never check driver rotation unless pump and driver couplings are disconnected and physically separated. Failure to follow this instruction can result in serious damage to pump and driver if rotation is wrong.*

After the unit has been wired and checked to insure that all components in the system (disconnect device, magnetic starters, pilot devices and motors) are properly connected, check motor rotation as follows:

- For 3 phase units only—momentarily energize the motors to ensure that the rotation is correct as indicated by the arrow cast into the pump volute. If rotation is incorrect, interchange two wires at the motor starter terminals T1 and T2.
- **IMPORTANT:** The pumps must not be operated while dry. Use extreme caution that motors are energized only momentarily to determine proper rotation.

D. STARTING THE PUMP

WARNING: *The pump must not be operated without an approved coupling guard in place. Failure to observe this warning could result in injury to operating personnel.*

- Install coupling guard on flexible coupled units.
- Fully open gate valve (if any) in suction line, and close gate valve in discharge line.
- Fill suction line with liquid and completely prime pump.
- Start the motor (pump).
- Immediately make a visual check of pump and suction piping for pressure leaks.
- Immediately after pump reaches full operating speed, slowly open the discharge gate valve until complete system flow is achieved.
- Check discharge piping for pressure leaks.
- If pump is fitted with pressure gauges, open gauge cocks and record pressure reading for future reference. Verify that the pump is performing in accordance with parameters specified on performance curve.
- Check and record voltage, amperage per phase, and

kilowatts, if a wattmeter is available.

E. VOLTAGE REGULATION

The motor will operate satisfactorily under the following conditions for voltage and frequency variation, but not necessarily in accordance with the standards established for operation under rated conditions:

- The voltage variation may not exceed 10% above or below rating specified on the motor data plate.
- The frequency variation may not exceed 5% above or below motor rating.
- The sum of the voltage and frequency variations may not exceed 10% above or below motor rating, provided the frequency variation does not exceed 5%.

F. PUMP SHUTDOWN

The following shutdown procedures will apply in most normal shutdowns for the PACO Type L pump. If pump will be inoperative for an extended length of time, follow storage procedures in Section IC.

- Always close the discharge gate valve before stopping pump. Close valve slowly to prevent hydraulic shock.
- Cut power to motor.

G. SHORT DURATION SHUTDOWN

- For overnight or temporary shutdown periods under nonfreezing conditions, the pump may remain filled with liquid. Make sure the pump is fully primed before restarting.
- For short or frequent shutdown periods under freezing conditions, keep fluid moving within pump casing and insulate or heat pump exterior to prevent freezing.

H. EXTENDED PERIOD SHUTDOWN

- For long shutdown periods, or to isolate the pump for maintenance, close suction gate valve. If no suction valve is used and the pump has positive suction head, drain all liquid from suction line to terminate liquid flow into pump suction nozzle. Remove plugs in pump drain and vent taps, as required, and drain all liquid from the pump volute casing.
- If freezing conditions will exist during long shutdown periods, completely drain the pump and blow out all liquid passages and pockets with compressed air. Freezing of pump liquid can also be prevented by filling the pump with antifreeze solution.

IV. MAINTENANCE

WARNING: Do not attempt any maintenance, inspection, repair or cleaning in the vicinity of rotating equipment. Such action could result in personal injury to operating personnel.

Before attempting any inspection or repair on the pump, the driver controls must be in the "OFF" position, locked and tagged to prevent injury to personnel performing service on the pump.

A. MOTOR LUBRICATION

- To lubricate the motor while running or at rest, remove grease drain plug (if any) and filler plug on grease fitting. Grease with clean lubricant until grease appears at drain hole or along motor shaft.

MOTOR RPM	MOTOR HP	OPERATING CONDITIONS		
		STANDARD	SEVERE	EXTREME
1750 & BELOW	1/3-7-1/2	3 YRS.	1 YR.	6 MOS.
	10-40	1-3 YRS.	6MOS.-1 YR.	3 MOS.
	50-150	1 YR.	6 MOS.	3 MOS.
	200 & UP	1 YR.	6 MOS.	3 MOS.
ABOVE 1750	(ALL HP)	6 MOS.	3 MOS.	3 MOS.

STANDARD CONDITIONS:
8 Hours per day operation, normal or light loading, clean air, 100°F, maximum ambient temperature.

SEVERE CONDITIONS:
Continuous 24-hour operation, shock loading or vibration, poor ventilation, 100°-150°F, ambient temperature.

EXTREME CONDITIONS:
Continuous operation, heavy shock or vibration, dirt or dust in air, extreme ambient temperature.

TABLE 6a: Recommended Lubrication Periods.

One-half to one cubic inch of grease is sufficient for motors 5 HP and under, with proportionately more grease for greater HP motors.

- Most fractional and some integral frame motors have "sealed-for-life" bearings, and do not require further lubrication throughout motor life.
- Always follow motor manufacturer's lubrication instructions, and periodically check grease fittings and drain plugs for leaks.
- If lubricating instructions do not accompany motor, refer to Table 6a for recommended lubrication periods.

- Table 7a lists recommended types of grease for both pump and motor lubrication. These types have all been thoroughly tested and should be used whenever possible.

B. PUMP LUBRICATION

- PACO Type LF pumps on horizontal bearing frames have bearing that may be sealed for life (requiring no lubrication), regreasable or oil lubricated.

MANUFACTURER	LUBRICANT
SHELL	DOLIUM® R™
EXXON	POLYREX®
CHEVRON	SRI GREASE NLGI 2
	BLACK PEARL - NLGI 2
PHILIPS	POLYTAC™
TEXACO	POLYSTAR RB

TABLE 7a

- To lubricate regreasable bearings, remove grease drain plug (if any) and filler plug. Add clean ball bearing lubricant until grease appears at drain hole or along shaft. On units with drain hole, all old grease can be purged out ahead of new. In such cases, the drain should be left unplugged for several minutes during pump operation to allow excess grease to be forced out.
- Lubricate bearing frame bearings at intervals of one to three months, depending on severity of environment. Pumps in a clean, dry, moderate temperature (100° F maximum) environment should be regreased at three month intervals. Too much grease can cause premature bearing failure—do not over-grease.
- On those PACO Type LF Centrifugal End Suction pumps ordered with oil lubricated bearings, (Fig. 8a) a regular oil maintenance program must be enforced. Pumps with oil lubricated bearings are fitted with a transparent reservoir (constant level oiler) that maintains oil level about the centerline of the bearing. When necessary, the oil supply in the reservoir of the constant level oiler must be renewed.
- After the first 200 hours of operation the oil should be changed. To change the oil, remove the drain plug at the bottom of the bearing cover and the filler plug (that also acts as a vent plug) at the top of the housing. After draining oil, replace the fittings and refill with an acceptable oil selected from Table 9a. After the first oil change, the oil should be changed again at 2000 hours and then at intervals of 8000 hours or once yearly, thereafter.

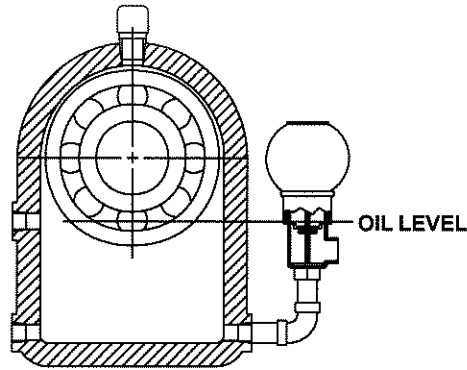


FIGURE 8a

LUBRICANT MANUFACTURER	BEARING OIL BRAND NAME
Aral Refining Co.	ARAL OIL CMU ARAL OIL TU 518
British Petroleum Co.	BP ENERGOL TH 100-HB
Calypsol Oil Company	CALYPSOLBISON OIL SR 25 or SR 36
Standard Oil Company	CHEVRON HYDRAULIC OIL 11 CIRCULATING OIL 45
Esso Corporation	ESSO-MAR 25 TERESSO 47 ESSTIC 50
Fina Oil Company	FINA HYDRAN 34 FINA CIRKAN 32
Gulf Refining Company	GULF HARMONY 47 GULF PARAMOUNT 45
Socony Mobil Oil Co.	VAC HLP 25 MOBILUX D.T.E. 25
Shell Oil Company	SHELL Tellus OIL 29
Sundco Oil Company	SUNVIS 821
The Texas Company	TEXACO Ursa Oil P 20 DEA VISCOBIL Sera 4
Wisura Refining Company	WISURA Norma 25 (36) WISURA Tempo 25 (36)

TABLE 9a: List of Acceptable Lube Oils

C. DISASSEMBLY OF PUMPS

(Refer to drawing on page 11).

- Complete disassembly instructions are outlined below. Proceed only as far as required to perform the maintenance work needed.
- Turn off power.
- Drain system. Flush, if necessary.
- Closed coupled units: Remove motor hold down bolts.


DISASSEMBLY OF LIQUID END.

- Remove casing bolts (8B)
- Remove back pull-out bearing frame assembly (20Y) from casing (1A)
- Unscrew impeller nut (8A)
- **CAUTION: Do not insert screwdriver between impeller vanes to prevent rotation.** It may be necessary to use a strap wrench around the impeller or shaft to prevent rotation.
- Use appropriate size gear puller aligned behind impeller vanes to remove impeller (3A) from shaft (6A).
- Remove impeller key (12A).
- Remove backplate bolts (8D). Remove backplate (2K) and seal housing (26P).
- Place seal housing on flat surface and press out seal seat (14A).
- If shaft sleeve (5A) requires replacement, it must be evenly heated to approximately 350°F to loosen locktite. Twist sleeve off shaft (6A).

DISASSEMBLY OF BEARING FRAME.

- Remove slinger (13G).
- Remove grease seal(s), (14S) if any.
- Remove bearing house retaining ring (61K).
- Press or tap on the pump end of the bearing-shaft assembly until one bearing is out.
- When one bearing is out, remove second retaining ring (61F), then remove complete assembly from bearing housing.
- Remove shaft retaining ring (61C) and press off bearings.
- Press on new bearings. Remember to press only on inner race of bearing while pressing them on.
- Assemble frame in the reverse procedure used for disassembly.
- Observe the following when reassembling the bearing frame.

TYPE LF, CROSS SECTION AND PARTS LIST

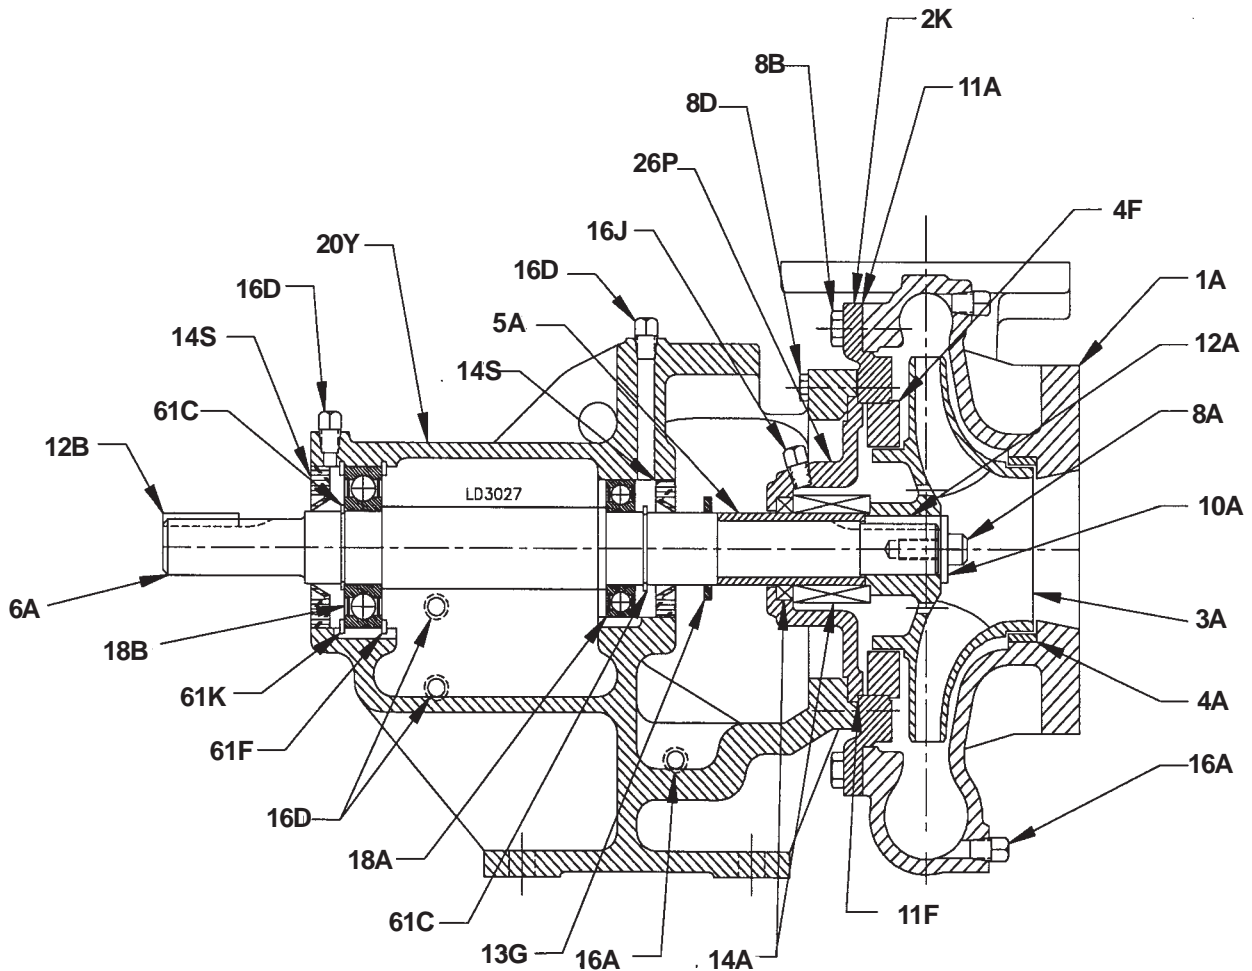

ITEM NO	PART NAME	ITEM NO	PART NAME	ITEM NO	PART NAME
1A	Casing	*10A	Washer, Packing	16L	Plug, Seal Chamber
2K	Backplate	10A	Washer, Impeller	18A	Bearing, Inboard
3A	Enclosed Impeller	11A	Gasket, Casing	18B	Bearing, Outboard
4A	Case Wear Ring	11F	Gasket, Backplate	20Y	Bearing Frame
**4F	Balance Ring	12A	Key, Impeller	*22A	Stud, Packing Gland
5A	Shaft Sleeve	12B	Key, Coupling	26P	Seal Housing
*5L	Lantern Ring	*13A	Packing	*26U	Packing Box
6A	Shaft	13G	Slinger	*35F	Nut, Packing Gland
*7A	Packing Gland	14A	Shaft Seal	61C	Snap Ring
8A	Cap Screw, Impeller	14S	Lip Seal	*61J	Snap Ring
8B	Cap Screw, Casing	16A	Plug, Drain	*Packed Pumps Only	
8D	Cap Screw, Brg. Frame	16D	Plug, Grease/Oil Filter	**If Applicable	

- Replace lip seals (14S) if worn or damaged.
- Replace bearings (18A), (18B) if loose, rough or noisy when rotated.
- Check shaft (6A) for runout at the sleeve (5A) area. Maximum permissible is .002" T.I.R.

D. REASSEMBLY OF PUMPS

- All parts should be cleaned before reassembly.
- Refer to parts list to identify required replacement items. Specify pump serial or catalog number when ordering parts.
- Reassembly is the reverse of disassembly.
- Observe the following when reassembling the liquid end:
 - All mechanical seal components must be in good condition or leakage may result. Replacement of complete seal assembly is recommended.
- New shaft sleeves are installed by bonding to shaft with hydraulic setting locktite.

V. ORDERING PARTS

- **PACO Pumps** has over 175 years of experience in the design, manufacture, and application of centrifugal pumps and pumping systems. PACO's commitment to state-of-the-art pump design and quality manufacturing assures maximum user benefits with optimum equipment life at lower cost.
- PACO's commitment to their customers continues through an extensive service organization. Highly trained technicians can assist customers with initial startup, troubleshooting, repair, and system analysis.

PACO maintains an extensive stock of replacement parts and parts kits for our most popular model pumps. Shipment of these parts is normally made within three days after receipt of an order. On larger pumps, where it is impractical for our factory to inventory low usage parts, replacement parts are normally manufactured and shipped within 15 working days of receipt of an order. In order to reduce pump repair time and shorten inconvenient pump service interruptions, it is suggested that the pump user stock spare parts. For suggested spare parts see Replacement Parts Guide A1b.2, attached, and contact your local PACO Sales Representative (see back cover for the number of your nearest PACO Sales office). Since spare parts requirements and quantities vary for specific pump constructions, allow your PACO Representative to help in

defining your spare part requirements. To ensure that the proper replacement parts are ordered for your particular pump model, when you call:

- Identify all pertinent data from the pump name plate (see Pump Identification). This should always include the pump Catalog or Model Number, and the pump Serial Number.
- For replacement impellers, also include from the nameplate the operating conditions (GPM and TDH) and the impeller diameter.
- Identify all parts by item number and description as indicated by the appropriate assembly drawing in this manual, for your particular pump model.

VI. TROUBLE SHOOTING

A.

SYMPTOMS	CAUSE CODE
<p>Pump does not deliver any liquid at start-up. Pump stops delivering liquid after start-up. Pump overheats and/or ceases to deliver liquid. Insufficient flow rate. Excessive flow rate. Discharge pressure is too high. Shaft seal leaks appreciably, or the packing leaks excessively. Shaft seal or packing fails prematurely. Pump uses too much power. Pump runs rough and noisily. Bearings overheat and/or fail prematurely.</p>	<p>1*2*3*4*5*6*7*8*9*10*11*14*16*17*22*23*24*34 2*3*4*5*6*7*8*9*10*11*12*13*22*23*24*34 1*3*9*10*11*21*22*27*29*30*31*33*34*40*41 2*3*4*5*6*7*8*9*10*11*14*16*17*20*21*22*23*24*25*26*34 15*18*20*34 4*14*16*18*20*22*23*24*25*26*34 27*28*29*30*33*34*35*36*39*41 12*13*27*28*29*30*33*34*35*36*37*38*39*41 15*16*18*19*20*23*25*27*28*31*33*34*35*37*38*44 2*3*4*5*6*7*8*9*10*11*15*17*18*21*23*24*27*28*29*30* 31*32*33*34*40*41*42*45*46* 27*28*29*30*31*32*33*34*40*41*42*43*44*45*46</p>

B. POSSIBLE CAUSES

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. The pump has not been properly bled of air. 2. The pump suction line have not been completely primed. 3. The suction head (NPSHR) required by the pump is too high, or the net positive suction head available (NPSHA) at your facility is too low. 4. The fluid pumped contains too much entrained air or gas. 5. There are air pockets in the suction line. 6. An entry of air has suddenly occurred in the suction line. 7. An entry of air past the shaft seal into the pump has occurred. 8. The inlet of the suction line is insufficiently submerged. 9. The suction valve is closed or only partially open. 10. The suction strainer is clogged with dirt or debris. 11. The foot valve is clogged or undersized. 12. Little or no cooling fluid supplied to the shaft seals. 13. The lantern ring is not positioned opposite the flushing inlet thereby restricting fluid flow. | <ol style="list-style-type: none"> 14. Pump drive rotational speed too low. 15. Pump drive rotational speed too high. 16. Pump rotation wrong or impeller installed backwards. 17. Total head of installation (back Pressure) higher than rated total head of the pump. 18. Total head of installation (back Pressure) lower than rated total head of the pump. 19. Density of fluid pumped differs from that specified when the pump was purchased. 20. Viscosity of fluid pumped differs from that specified when the pump was purchased. 21. The pump is operating at too low a rate of flow (The discharge valve may be throttled too much). 22. If pumps are operating in parallel, the pump characteristics may not be suitable for parallel operation. 23. The impeller may be clogged with debris. 24. The impeller may be damaged. 25. The casing and impeller wear rings may be excessively worn. |
|---|---|

TROUBLE SHOOTING-POSSIBLE CAUSES (Cont'd)

26. There may be internal leakage from the discharge to the suction compartments as the result of internal gasket failure.
27. There may be a misalignment of the pump shaft.
28. The shaft may chatter because it is bent.
29. The pump may run rough due to improper balancing of the impeller.
30. The shaft may not be running due to worn bearings.
31. The impeller may be rubbing against the inside of the case.
32. The concrete pad might not be of sufficient size to provide pump stability.
33. The pump may have become misaligned during installation.
34. The operating conditions of the installation do not agree with the data specified when the pump was purchased.
35. The shaft seal may be incorrectly installed, or the stuffing box has not been packed correctly.
36. The shaft sleeve may be scored or pitted in the region of the packing due to dirt or abrasive matter in the flushing fluid.
37. Excessive tightening of the packing gland may block the flushing port thereby diminishing the sealing fluid flow.
38. Packing material may have become wedged or extruded between the shaft and the bottom of the stuffing housing due to excessive clearance on the packing backup washer.
39. The mechanical seal may have been damaged by running dry.
40. There may be excessive axial thrust (side loading) due to improper impeller central alignment.
41. The bearings may be worn.
42. The bearings may have been damaged during installation and/or dirt or other foreign matter may have entered the bearings during greasing or oiling.
43. Excessive greasing may cause the bearings to overheat.
44. Inadequate lubrication may be causing bearing failure.
45. Dirt may have entered the bearings past the O-Rings.
46. Moisture may have entered the bearing housing causing the bearings to rust.

Terms And Conditions Of Sale

SECTION 1: THE CONTRACT

The Contract shall be comprised of the following terms, together with such terms and conditions as are set forth in Seller's written proposal or quotation (the "Quotation"), including any documents, drawings or specifications incorporated therein by reference, and any additional or different terms proposed in Buyer's purchase order (the "Purchase Order") that are accepted by Seller in writing, which together shall constitute the entire agreement between the parties, provided, however, that preprinted terms on Buyer's purchase order or invoice shall not apply and Seller gives notice of objection to such terms. An offer by Seller in its Quotation that does not stipulate an acceptance date is not binding. This Contract shall be deemed to have been entered into upon written acknowledgment of the Purchase Order by an officer or authorized representative of Seller, which may not be modified, supplemented, or waived except in a writing executed by an authorized representative of the party to be bound.

SECTION 2: PRICE

The price quoted in the Quotation shall be the Purchase Price unless otherwise agreed in the Purchase Order. The Purchase Price for equipment shall include packing for shipment. Field Services shall be provided at Seller's standard rates. All other costs, including packing for storage, freight, insurance, taxes, customs duties and import/export fees, or any other item not specified in the Contract, shall be paid by Buyer unless separately stated in the Quotation and included in the price quoted. Any sales, use, or other taxes and duties imposed on the transaction or the equipment supplied shall be paid or reimbursed by Buyer.

SECTION 3: PAYMENT TERMS

Payment shall be due within 30 days of the date of Seller's invoice in U.S. funds unless otherwise agreed. If Buyer does not observe the agreed dates of payment, Buyer shall pay interest to Seller on overdue amounts at a rate that is the higher of: 9% per annum or a rate 5% in excess of the rate borne from time to time by new issues of six-month United States Treasury bills. Seller shall be entitled to issue its invoice for the Purchase Price for equipment upon the earlier of shipment, or notice to Buyer that Seller is ready to ship, and for services, upon completion. If the Purchase Price exceeds \$250,000 USD, Buyer shall pay the Purchase Price in Progress payments as follows: Fifteen percent (15%) upon submittal of general arrangement drawings, thirty five percent (35%) after receipt of first Bowl Casting, twenty percent (20%) after first case/bowl hydro test or bowl machining and thirty percent (30%) after notification of ready to ship.

SECTION 4: ACCEPTANCE AND INSPECTION

All equipment shall be finally inspected and accepted by Buyer within 14 days after delivery or such other period of time as is agreed in the Purchase Order. Buyer shall make all claims (including claims for shortages), excepting only those provided for under the warranty clause contained herein, in writing within such 14 day period or they are waived. Services shall be accepted upon completion. Buyer shall not revoke its acceptance. Buyer may reject the equipment only for defects that substantially impair its value, and Buyer's remedy for lesser defects shall be in accordance with Section 10, Warranty. If tests are made by Buyer to demonstrate the ability of the equipment to operate under the contract conditions and to fulfill the warranties in Section 10, Buyer is to make all preparations and incur all expenses incidental to such tests. Seller will have the right of representation at such tests at its expense, and the right to technically direct the operation of the equipment during such tests, including requiring a preliminary run for adjustments.

SECTION 5: TITLE AND RISK OF LOSS

Full risk of loss (including transportation delays and losses) shall pass to Buyer upon delivery, regardless of whether title has passed to Buyer, transport is arranged or supervised by Seller, or start-up is carried out under the direction or supervision of Seller. Delivery shall be ex works, INCOTERMS 2000. Loss or destruction of the equipment or injury or damage to the equipment that occurs while the risk of such loss or damage is borne by Buyer does not relieve Buyer of its obligation to pay Seller for the equipment.

SECTION 6: PATENT OR TRADEMARK INFORMATION

If the equipment sold hereunder is to be prepared or manufactured according to Buyer's specifications, Buyer shall indemnify Seller and hold it harmless from any claims or liability for patent or trademark infringement on account of the sale of such goods.

SECTION 7: CHANGES

Buyer may request, in writing, changes in the design, drawings, specifications, shipping instructions, and shipment schedules of the equipment. As promptly as practicable after receipt of such request, Seller will advise Buyer what amendments to the Contract, if any, may be necessitated by such requested changes, including but not limited to amendment of the Purchase Price, specifications, shipment schedule, or date of delivery. Any changes agreed upon by the parties shall be evidenced by a Change Order signed by both parties.

SECTION 8: CANCELLATION OR TERMINATION

Buyer shall have the right to cancel the Contract upon 15 days' prior written notice to Seller, and Seller shall stop its performance upon the receipt of such notice except as otherwise agreed with Buyer. If Buyer cancels the Contract, it shall pay: (a) the agreed unit price for equipment or components completed and delivered, (b) additional material and labor costs incurred, and for engineering services supplied by Seller with respect to the canceled items, which shall be charged to Buyer at Seller's rates in effect at the time of cancellation, but which shall not exceed the contract price for such items, and (c) such other costs and expenses, including cancellation charges under subcontracts, as Seller may incur in connection with such cancellation or termination.

SECTION 9: DELIVERY AND DELAYS

Seller shall use its best efforts to meet quoted delivery dates, which are estimated based on conditions known at the time

of quotation. Seller shall not be liable for any nonperformance, loss, damage, or delay due to war, riots, fire, flood, strikes or other labor difficulty, governmental actions, acts of God, acts of the Buyer or its customer, delays in transportation, inability to obtain necessary labor or materials from usual sources, or other causes beyond the reasonable control of Seller. In the event of delay in performance due to any such cause, the date of delivery or time for completion will be extended to reflect the length of time lost by reason of such delay. Seller shall not be liable for any loss or damage to Buyer resulting from any delay in delivery.

SECTION 10: WARRANTY

Seller warrants that the equipment or services supplied will be free from defects in material, and workmanship for a period of 12 months from the date of initial operation of the equipment, or 18 months from the date of shipment, whichever shall first occur. In the case of spare or replacement parts manufactured by Seller, the warranty period shall be for a period of six months from shipment. Repairs shall be warranted for 12 months or, if the repair is performed under this warranty, for the remainder of the original warranty period, whichever is less. Buyer shall report any claimed defect in writing to Seller immediately upon discovery and in any event, within the warranty period. Seller shall, at its sole option, repair the equipment or furnish replacement equipment or parts thereof, at the original delivery point. Seller shall not be liable for costs of removal, reinstallation, or gaining access. If Buyer or others repair, replace, or adjust equipment or parts without Seller's prior written approval, Seller is relieved of any further obligation to Buyer under this section with respect to such equipment or parts. The repair or replacement of the equipment or spare or replacement parts by Seller under this section shall constitute Seller's sole obligation and Buyer's sole and exclusive remedy for all claims of defects. SELLER MAKES NO OTHER WARRANTY OR REPRESENTATION OF ANY KIND WITH RESPECT TO THE EQUIPMENT OR SERVICES OTHER THAN AS SPECIFIED IN THIS SECTION 10. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED.

For purposes of this Section, the equipment warranted shall not include equipment, parts, and work not manufactured or performed by Seller. With respect to such equipment, parts, or work, Seller's only obligation shall be to assign to Buyer any warranty provided to Seller by the manufacturer or supplier providing such equipment, parts or work.

No equipment furnished by Seller shall be deemed to be defective by reason of normal wear and tear, failure to resist erosive or corrosive action of any fluid or gas, Buyer's failure to properly store, install, operate or maintain the equipment in accordance with good industry practices or specific recommendations of Seller, or Buyer's failure to provide complete and accurate information to Seller concerning the operational application of the equipment.

SECTION 11: TECHNICAL DOCUMENTS

Technical documents furnished by Seller to Buyer, such as drawings, descriptions, designs and the like, shall be deemed provided to Buyer on a confidential basis, shall remain Seller's exclusive property, shall not be provided in any way to third parties, and shall only be used by Buyer for purposes of installation, operation and maintenance. Technical documents submitted in connection with a Quotation that does not result in a Purchase Order shall be returned to Seller upon request.

SECTION 12: LIMITATION OF LIABILITY

Seller shall in no event be liable for any consequential, incidental, indirect, special or punitive damages arising out of the Contract, or out of any breach of any of its obligations hereunder, or out of any defect in, or failure of, or malfunction of the equipment, including but not limited to, claims based upon loss of use, lost profits or revenue, interest, lost goodwill, work stoppage, impairment of other equipment, environmental damage, nuclear incident, loss by reason of shutdown or nonoperation, increased expenses of operation, cost of purchase of replacement power or claims of Buyer or customers of Buyer for service interruption whether or not such loss or damage is based on contract, tort (including negligence and strict liability) or otherwise.

Seller's maximum liability under this Contract shall not exceed the Purchase Order amount of the equipment or portion thereof upon which such liability is based. All such liability shall terminate upon the expiration of the warranty period, if not sooner terminated.

SECTION 13: THIS COMPANY IS AN EQUAL OPPORTUNITY EMPLOYER


This agreement incorporates by reference applicable provisions and requirements of Executive Order 11246 and FAR Section 52.222-26 (covering race, color, religion, sex and national origin); the Vietnam Era Veterans Readjustment Assistance Act of 1974 and FAR Section 52.222-35 (covering special disabled and Vietnam era veterans); and the Rehabilitation Act of 1973 and FAR Section 52.222-36 (covering handicapped individuals). By acceptance of this agreement Buyer certifies that it does not and will not maintain any facilities in a segregated manner, or permit its employees to perform their services at any location under its control where segregated facilities are maintained, and further that appropriate physical facilities are maintained for both sexes. Buyer agrees that it will obtain a similar certificate prior to award of any nonexempt lower-tier subcontracts.

SECTION 14: LAW AND ARBITRATION

The Contract shall be governed by the law of the State of Texas. Any disputes arising out of this Contract shall be resolved by informal mediation in any manner that the parties may agree within 45 days of written request for mediation by one party to the other. Any dispute that cannot be resolved through mediation shall be resolved by binding arbitration conducted in English in Portland, Oregon under the Commercial Rules of the American Arbitration Association except as otherwise provided in this Section. The arbitration shall be conducted by three arbitrators chosen in accordance with said Rules. The arbitrators are not entitled to award damages in excess of compensatory damages. Judgment upon the award may be entered in any court having jurisdiction.

Check our worldwide offices at
www.paco-pumps.com

PACO LF Cross Section

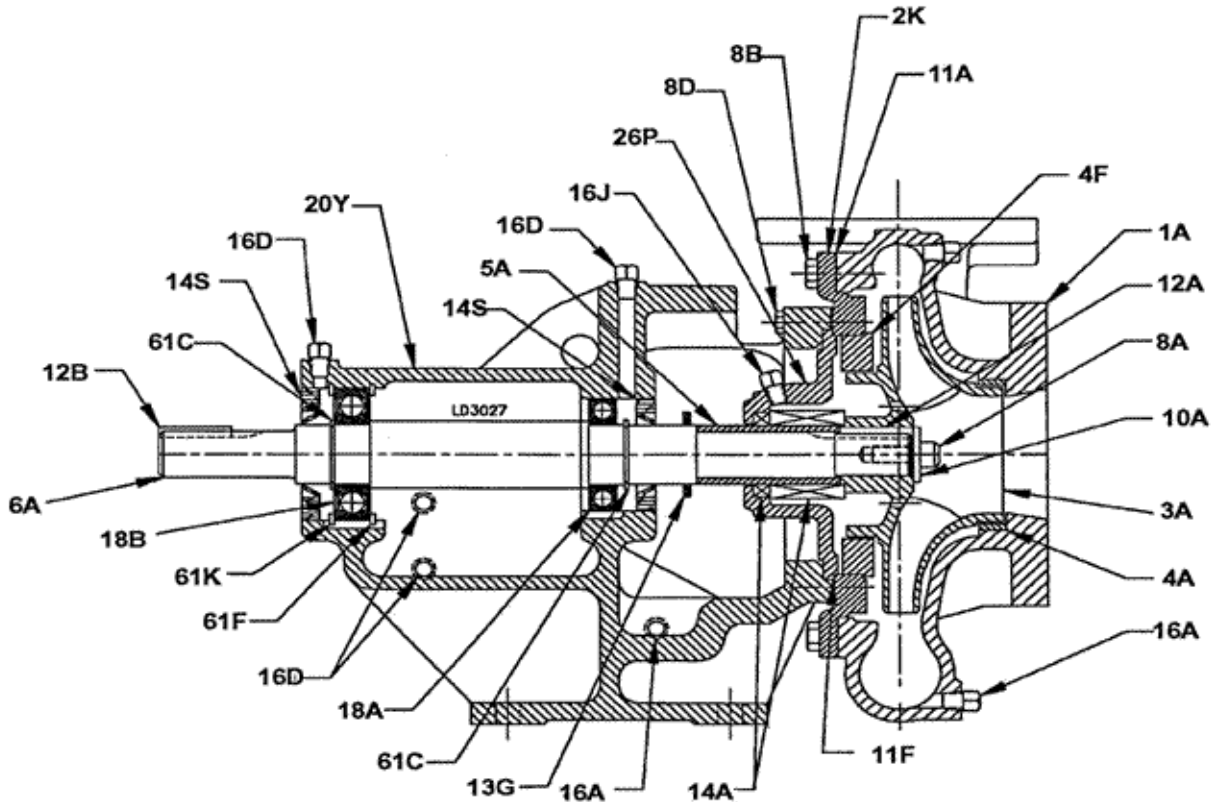

ITEM NO	PART NAME	ITEM NO	PART NAME	ITEM NO	PART NAME
1A	Casing	*10A	Washer, Packing	16L	Plug, Seal Chamber
2K	Backplate	10A	Washer, Impeller	18A	Bearing, Inboard
3A	Enclosed Impeller	11A	Gasket, Casing	18B	Bearing, Outboard
4A	Case Wear Ring	11F	Gasket, Backplate	20Y	Bearing Frame
**4F	Balance Ring	12A	Key, Impeller	*22A	Stud, Packing Gland
5A	Shaft Sleeve	12B	Key, Coupling	26P	Seal Housing
*5L	Lantern Ring	*13A	Packing	*26U	Packing Box
6A	Shaft	13G	Slinger	*35F	Nut, Packing Gland
*7A	Packing Gland	14A	Shaft Seal	61C	Snap Ring
8A	Cap Screw, Impeller	14S	Lip Seal	*61J	Snap Ring
8B	Cap Screw, Casing	16A	Plug, Drain	*Packed Pumps Only **If Applicable	
8D	Cap Screw, Brg. Frame	16D	Plug, Grease/Oil Filter		

END SUCTION PUMPS REPLACEMENT PARTS GUIDE TYPE LC, LF, LCV

*This guide is valid for all Grundfos CBS products beginning with product codes 10, 11 and 20.
See back cover for explanation and identification.*

Grundfos CBS End Suction Pumps are designed and built to provide maximum life while requiring minimum attention and service. At times, replacement parts may be required. **VIRTUALLY ALL REQUIRED PARTS ARE AVAILABLE IN KIT FORM.**

These kits (easily selected from the charts on the following pages) have been designed to insure that any parts needed when replacing any End Suction component, are furnished when you need them, with minimum effort.

Guidelines and Suggestions:

The pump nameplate contains all data required in the selection and ordering of the proper replacement parts kit. The PUMP MODEL AND SERIAL NUMBER should be referenced when ever any replacement parts kit is ordered, while the **pump conditions** (GPM/TDH) and **impeller trim** are required data for the ordering of replacement impellers.

NOTE: SEAL/PACKING KITS ARE ALWAYS RECOMMENDED AS SPARE PARTS
--

TO REPLACE A MECHANICAL SEAL

Select the correct Seal Kit, which contains all gaskets and impeller hardware. Shaft sleeve inspection is suggested.

TO REPLACE THE PACKING

gland

is damaged it may be replaced by ordering the proper Gland Kit. A shaft sleeve or adapter shaft will probably be required.

TO REPLACE THE SHAFT SLEEVES

Select sleeve from sleeve chart. A Seal or Packing Kit will provide other normally needed parts.

**NOTE: For close-coupled units, motor frame type is required for proper sleeve replacement.
Motor type is indicated by frame designation, found on motor nameplate:**

Gyropoise Motors - Frame XXX **TG**

JM Motors - Frame XXX **JM** or **JMZ**

CCP Motors - All Others

(Fractional construction X0XXXX and X1XXXX

do not require sleeves.)

TO REPLACE THE BEARING FRAME

Select the correct Bearing Frame assembly.

TO REPLACE IMPELLER

Select the correct Impeller Kit which contains all gaskets and impeller hardware. A Wear Ring Kit is highly Recommended, and a Sseal or Packing Kit will probably be required. Shaft sleeve inspection is suggested.

TO REPLACE WEAR RINGS

Select the correct Wear Ring Kit. An Impeller Kit may be indicated if wear is excessive. A Seal/Packing Kit will provide all other normally replaced components.

TO REPLACE BEARINGS (Frame mounted pumps only)

Select the correct Bearing Frame Kit, which contains the bearings and moisture seals.

TO REPLACE THE SHAFT

Select the correct Shaft Kit. A Bearing Frame Kit and shaft sleeve will also be required. A Seal or Packing Kit will probably be required.

TO REPLACE LOST OR DAMAGED HARDWARE

Select the correct Hardware Kit.

TO OVERHAUL THE PUMP

Select an Impeller Kit, Wear Ring Kit, Hardware Kit, Seal or Packing Kit, and a Sleeve or Adapter Shaft. Bearing replacement may also be indicated.

TO OVERHAUL THE BEARING FRAME

Select a Bearing Frame Kit and a Shaft Kit.

TO REPLACE SLINGER (Included in Shaft Kit)

If not replacing shaft, order individually.

ORDERING:

After determining and selecting the required Kit(s), or for selection assistance, contact your local Grundfos CBS Sales Office, Representative or Distributor.

Model No.	Pump Constr. Code	Impeller Kit (1)		Wear Ring Kit	Hardware Kit	Sleeve *(2)*	Seal Kit (3)	Packing Kit	Gland -
		Bronze	Iron						
1250-1	X0XXXX	K1000-B	K1000-C	-	K1251		K100-X	-	-
1250-5	X0XXXX	K1001-B	K1001-C	-	K1251		K100-X	-	-
1250-7	X0XXXX	K2323-B	K2323-C	-	K1251		K100-X	-	-
1550-1	X0XXXX	K1001-B	K1001-C	K1201	K1251		K100-X	-	-
1550-1	X1XXXX	K1002-B	K1002-C	K1201	K1251		K101-X	-	-
1550-1	X3XXXX	K1817-B	K1817-C	K1821	K1814		K1815-X	-	-
1550-5	X0XXXX	(4) K1973-B	(4) K1973-C	-	K1251		K100-X	-	-
1550-5	X1XXXX	(4) K1974-B	(4) K1974-C	-	K1251		K101-X	-	-
1550-5	X3XXXX	(4) K1975-B	(4) K1975-C	-	K1814		K1815-X	-	-
1550-7	X0XXXX	K1973-B	K1973-C	-	K1251		K100-X	-	-
1550-7	X1XXXX	K1974-B	K1974-C	-	K1251		K101-X	-	-
1550-7	X3XXXX	K1975-B	K1975-C	-	K1814		K1815-X	-	-
1550-9	X1XXXX	K2323-B	K2323-C	-	K1251		K101-X	-	-
1550-9	X3XXXX	K2325-B	K2325-C	-	K1814		K1815-X	-	-
2050-1	X0XXXX	K1005-B	K1005-C	-	K1251		K100-X	-	-
2050-1	X1XXXX	K1006-B	K1006-C	-	K1251		K101-X	-	-
2050-1	X3XXXX	K1819-B	K1819-C	-	K1814		K1815-X	-	-
3050-1	X1XXXX	K1007-B	-	-	K1251		K101-X	-	-
3050-1	X3XXXX	K1820-B	-	-	K1814		K1815-X	-	-
1070-5	X0XXXX	(5) K1966-B	(5) K1966-C	K1202	K1252		K102-X	-	-
1070-5	X3XXXX	(5) K1967-B	(5) K1967-C	K1202	K1253		K105-X	K181	K1291
1070-7	X0XXXX	K1966-B	K1966-C	K1202	K1252		K102-X	-	-
1070-7	X3XXXX	K1967-B	K1967-C	K1202	K1253		K105-X	K181	K1291
1270-5	X0XXXX	K1010-B	K1010-C	K1203	K1252		K102-X	-	-
1270-5	X3XXXX	K1011-B	K1011-C	K1203	K1253		K105-X	K181	K1291
1270-7	X0XXXX	(6) K1962-B	(6) K1962-C	K1203	K1252		K102-X	-	-
1270-7	X3XXXX	(6) K1963-B	(6) K1963-C	K1203	K1253		K105-X	K181	K1291
1270-9	X0XXXX	K1962-B	(6) K1962-C	K1203	K1252		K102-X	-	-
1270-9	X3XXXX	K1963-B	K1963-C	K1203	K1253		K105-X	K181	K1291
1570-1	X0XXXX	K1014-B	K1014-C	K1204	K1252		K102-X	-	-
1570-1	X3XXXX	K1015-B	K1015-C	K1204	K1253		K105-X	K181	K1291
1570-5	X0XXXX	K1016-B	K1016-C	K1204	K1252		K102-X	-	-
1570-5	X3XXXX	K1017-B	K1017-C	K1204	K1253		K105-X	K181	K1291
2070-5	X0XXXX	K1018-B	K1018-C	K1205	K1252		K102-X	-	-
2070-5	X3XXXX	K1019-B	K1019-C	K1205	K1253		K105-X	K181	K1291
2070-7	X0XXXX	K1020-B	K1020-C	K1205	K1252		K102-X	-	-
2070-7	X3XXXX	K1021-B	K1021-C	K1205	K1253		K105-X	K181	K1291
2070-7	X4XXXX	K1022-B	K1022-C	K1205	K1254		K104-X	K182	K1292
2070-9	X0XXXX	K2360-B	K2360-C	K1205	K1252		K102-X	-	-
2070-9	X3XXXX	K2362-B	K2362-C	K1205	K1253		K105-X	K181	K1291
2070-9	X4XXXX	K2364-B	K2364-C	K1205	K1254		K104-X	K182	K1292
2570-5	X3XXXX	K1023-B	K1023-C	K1206	K1253		K105-X	K181	K1291
2570-5	X4XXXX	K1024-B	K1024-C	K1206	K1254		K104-X	K182	K1292
2570-7	X3XXXX	K1025-B	K1025-C	K1206	K1253		K105-X	K181	K1291
2570-7	X4XXXX	K1026-B	K1026-C	K1206	K1254		K104-X	K182	K1292
3070-5	X3XXXX	K1027-B	K1027-C	K1207	K1253		K105-X	K181	K1291
3070-5	X4XXXX	K1028-B	K1028-C	K1207	K1254		K104-X	K182	K1292
3070-7	X3XXXX	K1029-B	K1029-C	K1208	K1253		K105-X	K181	K1291
3070-7	X4XXXX	K1030-B	K1030-C	K1208	K1254		K104-X	K182	K1292
4070-5	X3XXXX	K1031-B	K1031-C	K1209	K1253		K105-X	K181	K1291
4070-5	X4XXXX	K1032-B	K1032-C	K1239	K1254		K104-X	K182	K1292
4070-7	X3XXXX	K1033-B	K1033-C	K1210	K1253		K105-X	K181	K1291
4070-7	X4XXXX	K1034-B	K1034-C	K1240	K1254		K104-X	K182	K1292
4070-7	X4-(JM MTR)	K1034-B	K1034-C	K1241	K1254		K105-X	K182	K1292
1595-1	X3XXXX	K1035-B	K1035-C	K1204	K1255		K105-X	K181	K1291
1595-5	X3XXXX	K1036-B	K1036-C	K1204	K1255		K105-X	K181	K1291
1595-5	X4XXXX	K1037-B	K1037-C	K1204	K1256		K106-X	K182	K1292
1595-7	X3XXXX	K1976-B(7)	K1976-C(7)	K1204	K1255		K105-X	K181	K1291
1595-7	X4XXXX	K1977-B(7)	K1977-C(7)	K1204	K1256		K106-X	K182	K1292
1595-9	X3XXXX	K1976-B	K1976-C	K1204	K1255		K105-X	K181	K1291
1595-9	X4XXXX	K1977-B	K1977-C	K1204	K1256		K106-X	K182	K1292

(1), (2), (3), (4), (5), (6), (7), (8) See Notes on Page 5.

Model No.	Pump Constr. Code	Impeller Kit (1)		Wear Ring Kit	Hardware Kit	Sleeve *(2)*	Seal Kit (3)	Packing Kit	Gland Kit
		Bronze	Iron						
2095-1	X3XXXX	K1040-B	K1040-C	K1205	K1255		K105-X	K181	K1291
2095-1	X4XXXX	K1041-B	K1041-C	K1205	K1256		K106-X	K182	K1292
2095-3	X3XXXX	K1042-B	K1042-C	K1205	K1255		K105-X	K181	K1291
2095-3	X4XXXX	K1043-B	K1043-C	K1205	K1256		K106-X	K182	K1292
2595-1	X3XXXX	K1046-B(8)	K1046-C(8)	K1206	K1255		K105-X	K181	K1291
2595-1	X4XXXX	K1047-B(8)	K1047-C(8)	K1206	K1256		K106-X	K182	K1292
2595-3	X3XXXX	K1046-B	K1046-C	K1206	K1255		K105-X	K181	K1291
2595-3	X4XXXX	K1047-B	K1047-C	K1206	K1256		K106-X	K182	K1292
2595-5	X3XXXX	K1048-B	K1048-C	K1206	K1255		K105-X	K181	K1291
2595-5	X4XXXX	K1049-B	K1049-C	K1206	K1256		K106-X	K182	K1292
2595-7	X3XXXX	K2245-B	K2245-C	K1206	K1255		K105-X	K181	K1291
2595-7	X4XXXX	K2246-B	K2246-C	K1206	K1256		K106-X	K182	K1292
3095-3	X3XXXX	K1050-B	K1050-C	K1207	K1255		K105-X	K181	K1291
3095-3	X4XXXX	K1051-B	K1051-C	K1207	K1256		K106-X	K182	K1292
3095-5	X3XXXX	K1052-B	K1052-C	K1207	K1255		K105-X	K181	K1291
3095-5	XAXXXX	K1053-B	K1053-C	K1226	K1256		K127-X	K182	K1292
3095-7	X3XXXX	K2371-B	K2371-C	K1207	K1255		K105-X	K181	K1291
3095-7	XAXXXX	K2374-B	K2374-C	K1226	K1256		K127-X	K182	K1292
4095-5	X3XXXX	K1054-B	K1054-C	K1211	K1255		K105-X	K181	K1291
4095-5	X4XXXX	K1055-B	K1055-C	K1211	K1256		K106-X	K182	K1292
4095-B	XAXXXX	K1056-B	K1056-C	K1211	K1256		K127-X	K182	K1292
4095-7	X3XXXX	K1057-B	K1057-C	K1211	K1256		K105-X	K181	K1291
4095-7	X4XXXX	K1058-B	K1058-C	K1211	K1256		K106-X	K182	K1292
4095-9	XAXXXX	K1059-B	K1059-C	K1211	K1256		K127-X	K182	K1292
5095-5	X4XXXX	K1060-B	K1060-C	K1212	K1256		K106-X	K182	K1292
5095-7	X4XXXX	K1061-B	K1061-C	K1213	K1256		K106-X	K182	K1292
6095-1	XAXXXX	K1062-B	K1062-C	K1214	K1256		K127-X	K182	K1292
6095-1	X5XXXX	K1063-B	K1063-C	K1238	K1257		K140-X	K183	K1293
2012-1	X3XXXX	K1064-B	K1064-C	K1205	K1258		K107-X	K181	K1291
2012-1	X4XXXX	K1065-B	K1065-C	K1205	K1259		K108-X	K182	K1292
2012-1	XAXXXX	K1066-B	K1066-C	K1205	K1259		K141-X	K182	K1292
2512-1	X4XXXX	K1068-B	K1068-C	K1206	K1259		K108-X	K182	K1292
2512-3	X3XXXX	K1069-B	K1069-C	K1206	K1258		K107-X	K181	K1291
2512-3	XAXXXX	K1070-B	K1070-C	K1206	K1259		K141-X	K182	K1292
3012-1	X4XXXX	K1071-B	K1071-C	K1215	K1259		K108-X	K182	K1292
3012-1	XAXXXX	K1072-B	K1072-C	K1215	K1259		K141-X	K182	K1292
3012-5	X4XXXX	K1073-B	K1073-C	K1215	K1259		K108-X	K182	K1292
3012-5	XAXXXX	K1074-B	K1074-C	K1215	K1259		K141-X	K182	K1292
3012-7	X4XXXX	K2247-B	K2247-C	K1215	K1259		K108-X	K182	K1292
3012-7	XAXXXX	K2248-B	K2248-C	K1215	K1259		K141-X	K182	K1292
4012-5	X4XXXX	K1075-B	K1075-C	K1216	K1259		K108-X	K182	K1292
4012-7	XAXXXX	K1077-B	K1077-C	K1216	K1259		K141-X	K182	K1292
4012-9	XAXXXX	K2244-B	K2244-C	K1216	K1259		K141-X	K182	K1292
4012-A	XAXXXX	K0289-B	K0289-C	K1216	K1259		K141-X	K182	K1292
5012-1	X4XXXX	K1078-B	K1078-C	K1217	K1259		K108-X	K182	K1292
5012-3	X4XXXX	K1080-B	K1080-C	K1218	K1259		K108-X	K182	K1292
5012-3	XAXXXX	K1081-B	K1081-C	K1218	K1259		K141-X	K182	K1292
6012-1	X4XXXX	K1082-B	K1082-C	K1219	K1260		K108-X	K182	K1292
6012-1	X5XXXX	K1083-B	K1083-C	K1219	K1259		K109-X	K183	K1293
6012-3	X4XXXX	K1084-B	K1084-C	K1220	K1259		K108-X	K182	K1292
6012-3	XAXXXX	K1085-B	K1085-C	K1220	K1260		K141-X	K182	K1292
6012-3	X5XXXX	K1086-B	K1086-C	K1221	K1260		K109-X	K183	K1293
8012-1	X5XXXX	K1087-B	K1087-C	K1222	K1260		K109-X	K183	K1293
8012-3	X5XXXX	K1088-B	K1088-C	K1223	K1261		K109-X	K183	K1293
3015-5	X4XXXX	K1089-B	K1089-C	K1215	K1261		K110-X	K182	K1292
3015-5	XAXXXX	K1090-B	K1090-C	K1215	K1261		K128-X	K182	K1292
3015-7	XAXXXX	K1986-B	K1986-C	K1215	K1261		K128-X	K182	K1292
4015-7	X4XXXX	K1091-B	K1091-C	K1216	K1261		K110-X	K182	K1292
4015-7	XAXXXX	K1092-B	K1092-C	K1216	K1261		K128-X	K182	K1292
4015-7	X5XXXX	K1093-B	K1093-C	K1216	K1261		K111-X	K183	K1293
5015-5	X5XXXX	K1094-B	K1094-C	K1224	K1261		K111-X	K183	K1293
5015-7	X5XXXX	K1095-B	K1095-C	K1225	K1261		K111-X	K183	K1293
6015-5	X5XXXX	K1096-B	K1096-C	K1218	K1261		K111-X	K183	K1293
6015-5	X6XXXX	K1097-B	K1097-C	K1227	K1261		K112-X	K184	K1294
6015-7	X5XXXX	K1098-B	K1098-C	K1228	K1261		K111-X	K183	K1293
6015-7	X6XXXX	K1099-B	K1099-C	K1229	K1261		K112-X	K184	K1294
8015-5	X5XXXX	K1100-B	K1100-C	K1228	K1261		K111-X	K183	K1293
8015-5	X6XXXX	K1101-B	K1101-C	K1229	K1261		K112-X	K184	K1294
1015-3	X6XXXX	K1102-B	K1102-C	K1230	K1261		K112-X	K184	K1294
1015-3	X8XXXX	K1715-B	K1715-C	K0479-X8	K0459		K1716-3	K186	K1295

- NOTES:**
- (1) Specify Impeller diameter when ordering.
 - (2) Un-Kitted, see page 5 for selection chart.
 - (3) See page 7 for seal selection, add appropriate dash number to kit number.
 - (4) Select trim diameter for conditions from appropriate curve 1550-7.
 - (5) Select trim diameter for conditions from appropriate curve 1070-7.
 - (6) Select trim diameter for conditions from appropriate curve 1270-9.
 - (7) Select trim diameter for conditions from appropriate curve 1595-9.
 - (8) Select trim diameter for conditions from appropriate curve 2595-3.

BEARING FRAME ASSEMBLY

Const. Code Bearing Frame Number	Catalog Number Steel Shaft Greased For Life	Stainless Shaft Greased For Life	Steel Shaft Greaseable	Stainless Shaft Greaseable	Steel Shaft Oil Lubed	Stainless Shaft Oil Lubed
XX10XX*	20061390	20060634	-	-	-	-
XX32XX*	20060616	20061569	-	-	-	-
XX3AXX	-	-	20061913	20061914	-	-
XX3LXX	20064043	20066000	-	-	-	-
XX3NXX	-	-	20064049	20066004	-	-
XX3MXX	-	-	-	-	20064046	20066003
XX62XX*	20060663	20061571	-	-	20062601	-
XX6CXX	-	-	20061588	20061781	-	-
XX6KXX	-	20062793	-	-	-	-
XX6LXX	20064044	20066001	-	-	-	-
XX6NXX	-	-	20064050	20066006	-	-
XX6MXX	-	-	-	-	20064046	20066005
XX82XX	2061370	20061782	-	-	20064033	-
XX8AXX	-	-	20061441	20061783	-	-
XX88XX	20062627	20062628	-	-	-	-
XX89XX	-	-	20062629	20062630	-	-
XX90XX	20061356	20061784	-	-	-	-
XX9AXX	-	-	20061579	20061785	-	-
XX9PXX	20062029	20062034	-	-	-	-
XX9QXX	-	-	20062030	20062035	-	-
XX93XX	-	-	20061551	20061842	-	-

Frame Number	Bearing Kit Number	Shaft Kit Number (Steel)	Shaft Kit Number (Stainless)
XX10XX	K200	-	-
XX22XX*	K201	K221	K232
XX32XX	K202	K222	K233
XX3AXX	K211	K223	K234
XX3LXX	K244	K253	K254
XX3NXX	K246	K253	K254
XX3MXX	K245	K253	K254
XX62XX	K203	K224	K235
XX6CXX	K204	K224	K235
XX6LXX	K247	K255	K256
XX6NXX	K249	K255	K256
XX6MXX	K248	K255	K256
XX6KXX	K203	-	K225
XX82XX	K205	K226	K237
XX8AXX	K212	K226	K237
XX88XX	K205	K226	K237
XX89XX	K212	K226	K237
XX90XX	K207	K227	K238
XX9AXX	K208	K227	K238
XX9PXX	K207	K228	K239
XX9QXX	K208	K228	K239

Note: * THE 10,22, 32, 62 BEARING FRAME IS OBSOLETE.

SHAFT SLEEVES AND ADAPTER SHAFTS

1. Shaft Sleeves (1) See Page 1 Prior to Making Selections.

Motor or Bearing Frame	Const. Code	Seal	Packing	Sleeve Material	Part Number		
Fractional #10	X0XXXX	X			None		
Integral -	X1XXXX	X			None		
#22	X3	X		Bronze	05001156B		
		X		Stainless	05001156H303		
Gypropoise (TG) #32, 3A #3L, 3N, 3M	X3	X		Bronze	05008976B		
		X		Stainless	05008976H303		
		'03	X	Bronze	05008976B		
		X	X	Ceramic	05008976BK-31		
83	X	X		Bronze	05015284B		
		X		Stainless	05015284H303		
		93	X	Bronze	05013227B		
		X	X	Stainless	05013227H303		
JM	X3	X		Bronze	05017547B		
		X		Stainless	05017547H303		
83	X	X		Bronze	05017963B		
		X		Stainless	05017963H303		
		JP, CCP	X		Bronze	05002020B	
		X3	X			Stainless	05002020H303
X				Bronze	05002020B		
X				Ceramic	05002020BK-31		
X				Stainless	05002020H303		
83	X	X		Bronze	05017635B		
		X		Stainless	05017635H303		
		JP, CCP #62, 6C #6L, 6N, 6M	X4	X		Bronze	05002272B
		X			Stainless	05002272H303	
'04		X		Bronze	05002272B		
		X		Ceramic	05002272BK-31		
		X		Stainless	05002272H303		
84	X			Bronze	05018019B		
		94	X		Bronze	05016077B	
JM	X4	X		Bronze	05016451B		
		X		Stainless	05016451H303		
84	X	X		Bronze	05018127B		
		X		Stainless	05018127H30		
JP, CCP #62, 6C #6L, 6N, 6M #62, 6C, 6K #6L, 6N, 6M	0A	X		Bronze	05017069B		
		X		Stainless	05017069H303		
	XA		X		Bronze	05017069B	
			X		Ceramic	05017069BK-31	
JM	XA	X		Bronze	05017901B		
		X		Stainless	05017901H303		
CCP #82, 88, 89, 8A	X5	X (2)		Bronze	05012502B		
		X		Stainless	05012502H303		
		X		Bronze	05011947B		
		X		Ceramic	05011947BK-31		
90	X6	X		Bronze	05013501B		
		X		Stainless	05013501H304		
9A, 9P, 9Q		X		Bronze	05013177B		
		X		Ceramic	05013177BK-31		
		X		Stainless	05013177H304		
		X		Stainless	05013177H304		

ADAPTER SHAFTS

Motor	Const. Code	Packing	Kit No.
JM	X3	X	K1297
	X4	X	K1298
	XA	X	K1299

- (1) Requires 34029915 Tube of Locktite.
- (2) Standard single seal only. For double, liquid jacketed or teflon type 9 seal, use the sleeve designated for packing.

Pump Model	Pump Const. Code	Std. Seal BUNA - Cer. Seat C-Code 1XXXXX	Std. Seal BUNA - Sil. Seat C-Code 7XXXXX	Viton - Ni-Resist Seat C-Code 6XXXXX	Viton - Tung. Car. Seat C-Code 2XXXXX	Viton - Ni-Resist Seat Liq. Jcktd. C-Code 9XXXXX	BUNA - Cer. Seat Dbl. Mech Std. Seal C-Code 3XXXXX	BUNA - Sil. Seat Bal. Seal C-Code 8XXXXX	EPDM - Sil. Seat Std. Seal C-Code FXXXXX	EPDM - Sil. Seat Liq. Jcktd. C-Code GXXXXX
1250 1550 2050	X0XXXX	K100-1	K100-7	K100-6	K100-2	-	-	-	K100-F	-
1550 2050 3050	X1XXXX	K101-1	K101-7	K101-6	K101-2	-	-	-	K101-F	-
1070 1270 1570 2070	X0XXXX	K102-1	K102-7	K102-6	K102-2	-	-	-	K102-F	-
1070 1270 1570 2070 2570 3070 4070	X3XXXX	K105-1	K105-7	K105-6	K105-2	K105-7	K105-3	K105-8	K105-F	K105-G
2070 2570 3070 4070	X4XXXX	K104-1	K104-7	K104-6	K104-2	K104-7	K104-3	K104-8	K104-F	K104-G
1595 2095 2595 3095 4095	X3XXXX	K105-1	K105-7	K105-6	K105-2	K105-7	K105-3	K105-8	K105-F	K105-G
1595 2095 2595 3095 4095 5095	X4XXXX	K106-1	K106-7	K106-6	K106-2	K106-7	K106-3	K106-8	K106-F	K106-G
3095 4095 6095	XAXXXX	K127-1	K127-7	K127-6	K127-2	-	-	-	K127-F	-
6095	X4XXXX	K140-1	K140-7	K140-6	K140-2	-	K140-3	-	K140-F	-
2012 2512	X3XXXX	K107-1	K107-7	K107-6	K107-2	K107-7	K107-3	K107-8	K107-F	K107-G
2012 2512 3012 4012 5012 6012	X4XXXX	K108-1	K108-7	K108-6	K108-2	-	-	-	K108-F	-
2012 2512 3012 4012 5012 6012	XAXXXX	K141-1	K141-7	K141-6	K141-2	-	-	-	K141-F	-
6012 8012 3015 4015	X5XXXX X4XXXX	K109-1 K110-1	K109-7 K110-7	K109-6 K110-6	K109-2 K110-2	- -	K109-3 -	- -	K109-F K110-F	- -
3015 4015	XAXXXX	K128-1	K128-7	K128-6	K128-2	-	-	-	K128-F	-
4015 5015 6015 8015	X5XXXX	K111-1	K111-7	K111-6	K111-2	-	K111-3	-	K111-F	-
6015 8015 1015	X6XXXX	K112-1	K112-7	K112-6	K112-2	-	K112-3	-	K112-F	-

GASKETS

Pump Size (Nominal Max. Impeller Dia.)	Const. Code	Seal I.D. (in)	Gasket P/N	Gasket Description
5"	X0, X1	.625, .75	11005688X006	Volute Gasket
7"	X0, X3, X4	.625, 1.25, 1.75	17032665G4	Volute "O" Ring
9.5"	X3, X4, XA	1.25, 1.75	11012223X006 17032665G4	Volute Gasket "O" Ring-Backplate
9.5"	X5	2.25	11012223X006	Volute Gasket
12"	X3, XA	1.25, 1.75	11001340X006 17032665G4	Volute Gasket "O" Ring-Backplate
12"	X5	2.25	11001340X006 11010624X006	Volute Gasket Backplate Gasket
15"	XA	1.75	11003243X006 17032665G4	Volute Gasket "O" Ring-Backplate
15"	X5, X6	2.25, 2.75	11003243X006 11010624X006	Volute Gasket Backplate Gasket

SLINGERS

Const. Code	Part Number
X0	13008680B
X1	13008688B
X3	13006332G
X4,XA	13017070G8
X5	13002446G8
X6	13013176G8

EXPLANATION OF PUMP CATALOG
(Refer to Pump Nameplate)

XX — **XXXXX** — **XXXXXX**
Product — **Model** — **Construction**
Code — **Number** — **Code**

NOTE: This Replacement Parts Guide is valid for all Grundfos CBS products beginning with product codes 10, 11 and 20 only.

Product Code 10 = Close coupled End Suction, type LC
Product Code 11 = Closed Coupled Vertical Mount, type LCV
Product Code 20 = Framed Mounted End Suction, type LF

KIT COMPONENTS

<p>Impeller Kit: Impeller Volute Gasket Backplate Gasket Impeller Cap Screw Impeller Washer Impeller Key Impeller Nut Locktite</p>	<p>Seal Kit: Mechanical Seal Volute Gasket Backplate Gasket Seal Cap Gasket Impeller Cap Screw Impeller Washer Impeller Key Impeller Nut Locktite</p>	<p>Packing Kit: Packing Seal Volute Gasket Backplate Gasket Lantern Ring Impeller Cap Screw Impeller Washer Impeller Key Impeller Nut</p>
<p>Wear Ring Kit: Wear Rings</p>	<p>Bearing Frame Assembly</p>	<p>Gland Kit: Packing Gland Studs Nuts Bolts Washers Retaining Ring</p>
<p>Sleeves: (Non-Kitted) Bronze Bronze, Ceramic Coated Stainless Steel</p>	<p>Bearing Frame Kit: Ball Bearings Moisture Seals Retaining Rings</p>	
<p>Adapter Shafts: 303 Stainless Steel Adapter Shaft Key Rollpin</p>	<p>Shaft Kit: Shaft Slinger Keys</p>	<p>Hardware Kit: Cap Screws</p>
		<p>Gaskets: (Non-Kitted)</p>

NOTE: Kits may contain all parts listed. They are individually selected for each pump and its construction.

Kits may contain gaskets wherever gasket replacement is indicated, as noted above. Should "individual" gaskets be required, see page 8.

NOTE: Seal/Packing Kits are always recommended as spare parts.