


HOW TO USE YOUR RAYPAK ILLUSTRATED PARTS LIST

The Model Number, of a Raypak boiler, is found on the Rating Plate for the Boiler. Each Model number identifies the application, the construction and the function of the boiler and provides a positive means of providing information, both installation and service, and parts in a minimum amount of time. The example, shown below, should be used as a guide to identifying your boiler.


Model No: H3 - 1631

 NATL. BD. 175968 CERTIFIED BY RAYPAK, INC. OXNARD, CALIFORNIA MAX W.P. WATER 160 PSI BTU/HR. INPUT 1,630,000 MFR. SERIAL NO. 0010175968 MIN RELIEF VALVE CAP 1,337 LBS/HR HEATING SURFACE 129 SQ. FT. MAX WATER TEMP 250 °F BTU/HR. OUTPUT 1,336,600 BTU/HR. INPUT 1,630,000 MIN INPUT RATE 0 BTU/HR GAS NAT MODEL NO. H3-1631 CATEGORY 1 BOILER ACCEPTED FOR USE CITY OF NEW YORK DEPARTMENT OF BUILDINGS MEAF: 407-88-E VOL II ANS Z21 13b-1994 LOW PRESSURE BOILER p/n: 900808	HOT WATER BOILER FOR INDOOR INSTALLATION ONLY MIN. CLEARANCES FROM COMBUSTIBLE CONSTRUCTION <table style="width: 100%;"> <tr><td>RIGHT SIDE</td><td>24"</td></tr> <tr><td>LEFT SIDE</td><td>24"</td></tr> <tr><td>BACK</td><td>24"</td></tr> <tr><td>TOP</td><td>24"</td></tr> </table> FOR SERVICING, PROVIDE AT LEAST 24" OF UNOBSTRUCTED CLEARANCE IN FRONT OF UNIT THIS BOILER SHALL BE INSTALLED IN A SPACE LARGE IN COMPARISON TO THE SIZE OF THE BOILER <table style="width: 100%;"> <tr><td style="text-align: center;">NAT</td><td style="text-align: center;">LPG</td></tr> <tr><td>MAX. PERMISSIBLE GAS SUPPLY PRESSURE</td><td>14"W.C. 14"W.C.</td></tr> <tr><td>MIN. PERMISSIBLE GAS SUPPLY PRESSURE FOR PURPOSE OF INPUT ADJUSTMENT</td><td>7"W.C. 12"W.C.</td></tr> <tr><td>MANIFOLD PRESSURE</td><td>4"W.C. 11"W.C.</td></tr> </table> ELECTRICAL RATING 120/240V 60 HZ. LESS THAN 12 AMPERES WHEN USED WITH POWER VENT TERMINAL NO. 005733 ELECTRICAL RATING WILL BE LESS THAN 20 AMPS. 120 VAC. 60 HZ.	RIGHT SIDE	24"	LEFT SIDE	24"	BACK	24"	TOP	24"	NAT	LPG	MAX. PERMISSIBLE GAS SUPPLY PRESSURE	14"W.C. 14"W.C.	MIN. PERMISSIBLE GAS SUPPLY PRESSURE FOR PURPOSE OF INPUT ADJUSTMENT	7"W.C. 12"W.C.	MANIFOLD PRESSURE	4"W.C. 11"W.C.	FOR INSTALLATION ON NON-COMBUSTIBLE FLOORS ONLY* * FOR INSTALLATION ON COMBUSTIBLE FLOORING ONLY WHEN INSTALLED ON SPECIAL BASE PART NUMBER <table style="width: 100%;"> <tr><td>MODEL</td><td>PART NO.</td><td>MODEL</td><td>PART NO.</td></tr> <tr><td>982</td><td>059233</td><td>1468</td><td>059237</td></tr> <tr><td>1125</td><td>059234</td><td>1631</td><td>059238</td></tr> <tr><td>1223</td><td>059235</td><td>1826</td><td>059239</td></tr> <tr><td>1336</td><td>059236</td><td></td><td></td></tr> </table> ALL OPENINGS MUST REMAIN UNOBSTRUCTED BLOCKING OPENINGS WILL DAMAGE UNIT  <table style="width: 100%;"> <tr><td>MODEL</td><td>OUTDOOR KIT#</td><td>INDOOR KIT#</td></tr> <tr><td> </td><td> </td><td> </td></tr> </table>	MODEL	PART NO.	MODEL	PART NO.	982	059233	1468	059237	1125	059234	1631	059238	1223	059235	1826	059239	1336	059236			MODEL	OUTDOOR KIT#	INDOOR KIT#			
RIGHT SIDE	24"																																											
LEFT SIDE	24"																																											
BACK	24"																																											
TOP	24"																																											
NAT	LPG																																											
MAX. PERMISSIBLE GAS SUPPLY PRESSURE	14"W.C. 14"W.C.																																											
MIN. PERMISSIBLE GAS SUPPLY PRESSURE FOR PURPOSE OF INPUT ADJUSTMENT	7"W.C. 12"W.C.																																											
MANIFOLD PRESSURE	4"W.C. 11"W.C.																																											
MODEL	PART NO.	MODEL	PART NO.																																									
982	059233	1468	059237																																									
1125	059234	1631	059238																																									
1223	059235	1826	059239																																									
1336	059236																																											
MODEL	OUTDOOR KIT#	INDOOR KIT#																																										

Raytherm Type Designations

CURRENT TYPE DESIGNATION	FIRING MODE	OLD TYPE DESIGNATION	MODELS	CURRENT TYPE TEMPERATURE RANGE
H1	MECH MOD	T	133-1826	150-210
H2	MOTOR MOD	TA	514-4001	160-260
H3	TWO-STAGE	TB	181-4001	130-230
H4	ON/OFF	TC	181-4001	100-240
H5	LOW TEMP MOD	TD	400-1826	110-170
H6	MOTOR MOD	TX WITH B-3	514-4001	B6000*
H9	FOUR-STAGE	NEW	514-4001	-40-220
WH1	ON/OFF	WT, W1	133-4001	100-200
WH2	MECH MOD	THWS, W2	133-1826	110-170
WH2	MOTOR MOD	THWS, W2	2100-4001	104-220
WH3	TWO-STAGE	W3	181-4001	130-230
NH - Obsolete	MECH MOD (INSTANTANEOUS)	TIP OR THWS WITH TIP AT END OF S/N	514-1826	110-170
RH - Obsolete	MECH MOD	TIPR OR THWS WITH TIPR AT END OF S/N	514-1125	150-210
WH	ON/OFF - ECONOPAK	N/A	90-403	105-205
P	ON/OFF - POOL	WG	514-4001	40-105

Now find the part you need in the exploded view drawing. After you find the part you will notice a number and letter next to the part. See Drawing below. This is referred to as a "Call Out".

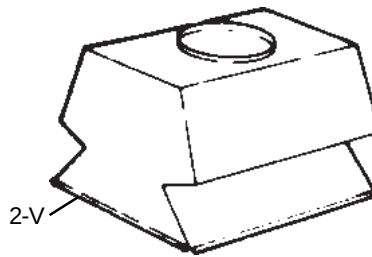

The number serves as a "Finder" number and has no specific part classification.

The letter serves as a "Part Class" identification number. The letters stand for specific groups of parts - see Example below.

B - BURNER TRAY	M - MISCELLANEOUS
C - CONTROLS	P - PILOT
G - GASVALVES	R - REFRACTORY
H - HEAT EXCHANGER	S - SHEET METAL
J - J-BOX (CONTROL BOX)	V - VENTING

To find the Raypak Part Number, refer to the parts list located on the page opposite to the exploded view drawing.

Now take the call-out you found in the exploded view and match it to the call-out in the left hand column. You will notice the parts are to groups. These are grouped into "Part Classes". See Example below.

Call-Out Column

H Class

CALL OUT	DESCRIPTION	185	265	335	405
H	HEAT EXCHANGER				
1-H	Heat Exchange Assy. Cast Iron (Complete)	005244F	005245F	005246F	005247F
	Heat Exchange Assy. Brass (Complete)	005248F	005249F	005250F	005251F
2-H	Inlet/Outlet Header CI	003759F	003759F	003759F	003759F
	Inlet/Outlet Header BR	003760F	003760F	003760F	003760F
3-H	Return Header CI	002450F	002450F	002450F	002450F
	Return Header BR	002451F	002451F	002451F	002451F
4-H	Tube Bundle	005252F	005253F	005254F	005255F
5-H	Heat Exchanger Tube (1)	005256F	005257F	005258F	005259F
6-H	Baffle Kit (8)	005260F	005261F	005262F	005263F
7-H	Bolt Kit	001303F	001303F	001303F	001303F
8-H	Header Gasket (9)	800014B	800014B	800014B	800014B
9-H	Unitherm Governor	062234B	062234B	062234B	062234B
10-H	U.G. Retainer Spring	850254	850254	850254	850254
11-H	Bypass Valve	062235B	062235B	062235B	062235B
12-H	Bypass Spring	850252	850253	850253	850253
13-H	Drain Valve	500719	500719	500719	500719
14-H	Sensor Well	003765F	003765F	003765F	003765F
15-H	Well Retaining Clip	300203	300203	300203	300203
16-H	Inlet & Outlet Flange	003766F	003766F	003766F	003766F
17-H	Flange Gasket 1 1/2" Connections	062236B	062236B	062236B	062236B
	Flange Gasket 2" Connections	800080B	800080B	800080B	800080B
18-H	Rear Drain Plug & Cover	005264F	005264F	005264F	005264F

You will also notice that some of the call-out's are indented. The indentations represent parts that are included in the assemblies listed directly above the indentation. You can order the complete assembly or the indented parts separately. If the part or assembly does not offer separate parts there will be no indentations.

Assembly	6-B	Burner Tray w/Burners
	7-B	Manifold - Lower
Parts included in Assembly	8-B	Manifold - Upper
	9-B	Burner Hold Down Bracket
	10-B	Burner Spacer



Raypak, Inc., 2151 Eastman Ave., Oxnard, CA 93030 (805) 278-5300, FAX (800) 872-9725
www.raypak.com Litho in U.S.A.

COMMERCIAL
MODELS: 989B THROUGH 2339B

CATALOG NO. 9300.811

Effective: 11-30-12

Replaces: 05-13-11

RAYPAK REPLACEMENT PARTS

MODEL SIZES: 989B, 1259B, 1529B, 1799B, 1999B, 2069B & 2339B

MODEL TYPES: DELTA LIMITED H & WH

DATES OF MANUFACTURE: 10-01-07 THROUGH CURRENT

THE PARTS LISTED ARE FOR STANDARD EQUIPMENT FOR THIS MODEL TYPE. RAYPAK RESERVES THE RIGHT TO SUBSTITUTE, DELETE OR CHANGE ANY PART WITHOUT NOTIFICATION. THE ADDITION OF OPTIONS MAY ALSO CHANGE SOME OF THE PARTS. ORDER REPLACEMENT PARTS FROM ACTUAL HEATER COMPONENTS.




FOR DETAILED INSTRUCTIONS, SEE "HOW TO USE YOUR RAYPAK ILLUSTRATED PARTS LIST",
CATALOG NO. 9001.10




Raypak, Inc., 2151 Eastman Avenue, Oxnard, CA 93030
(805) 278-5300 Fax (800) 872-9725


Litho In U.S.A.

P/N 241325

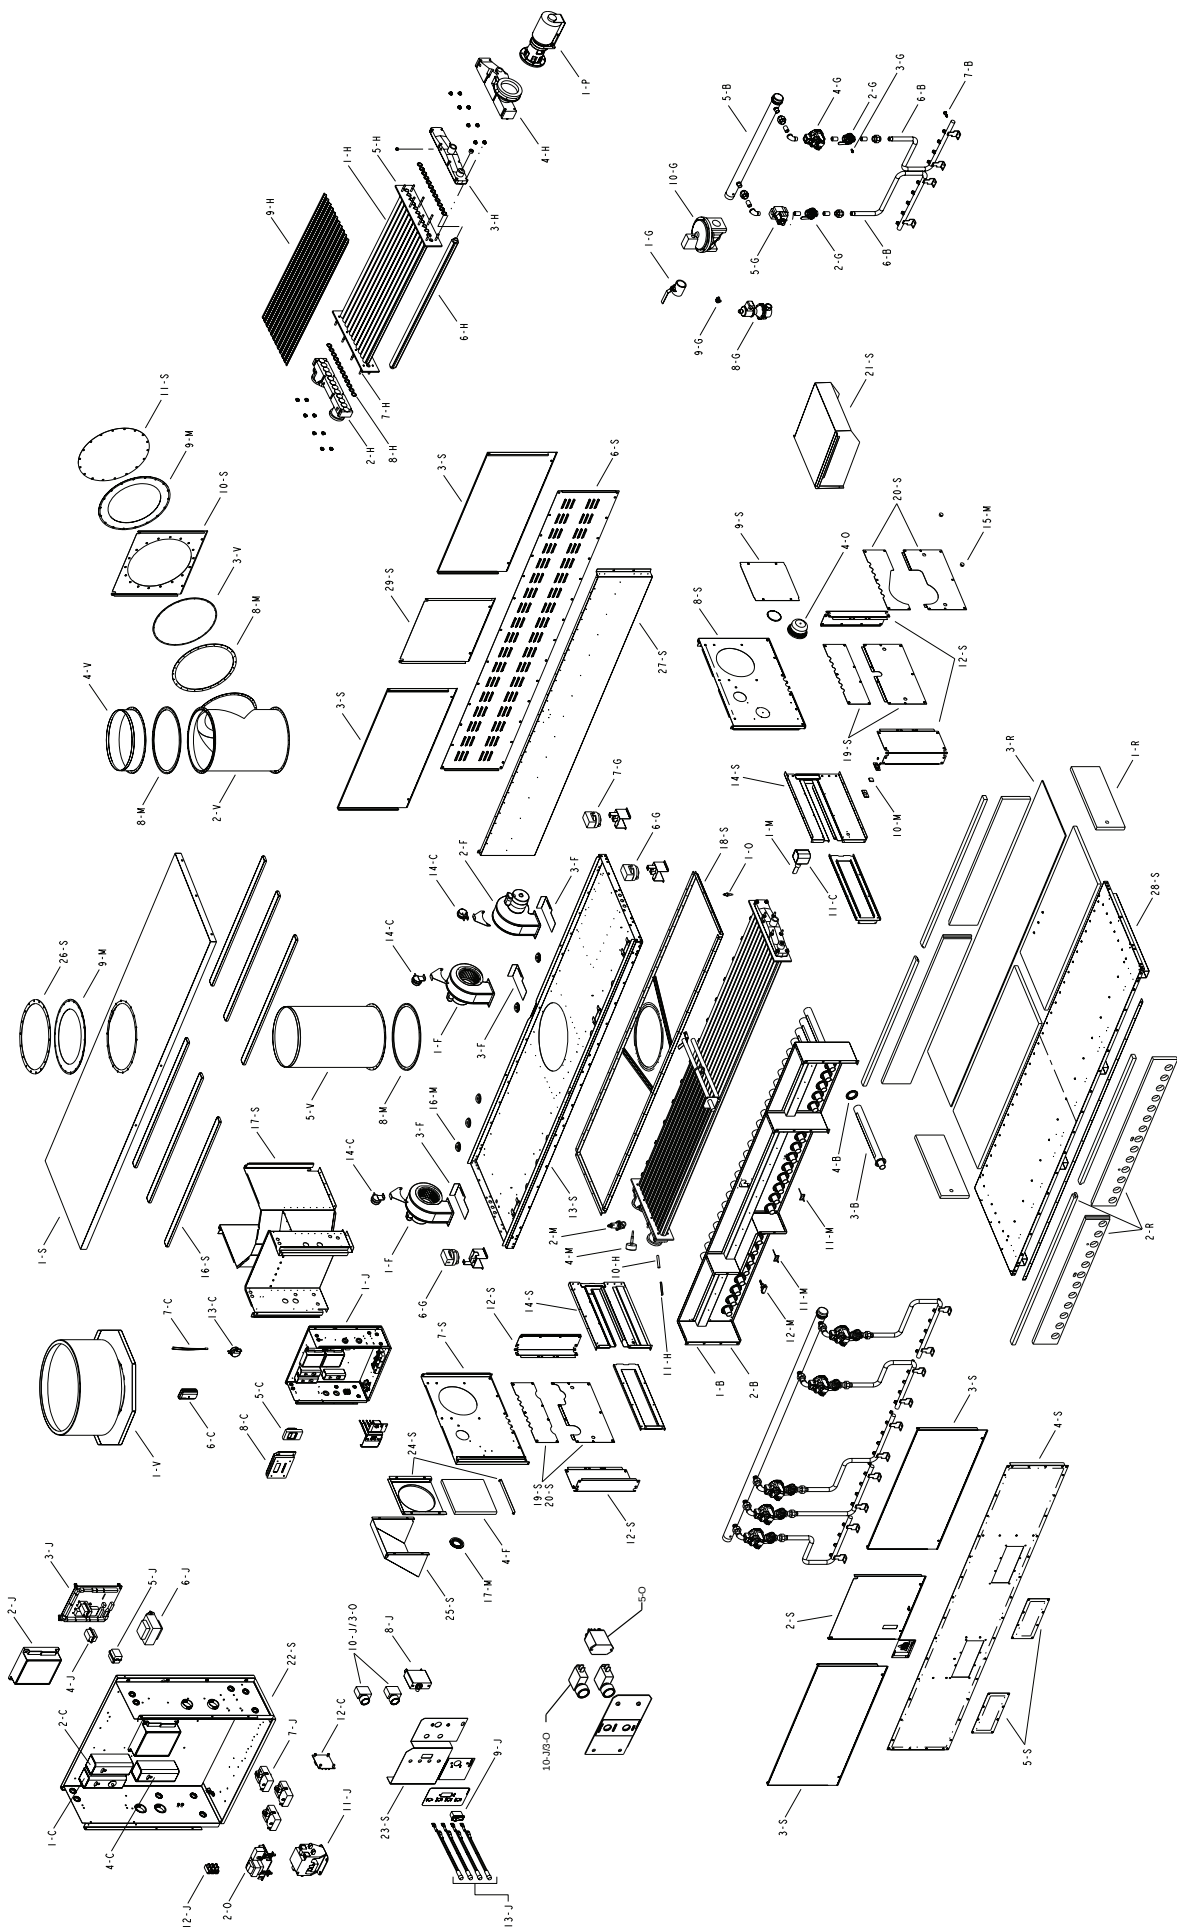


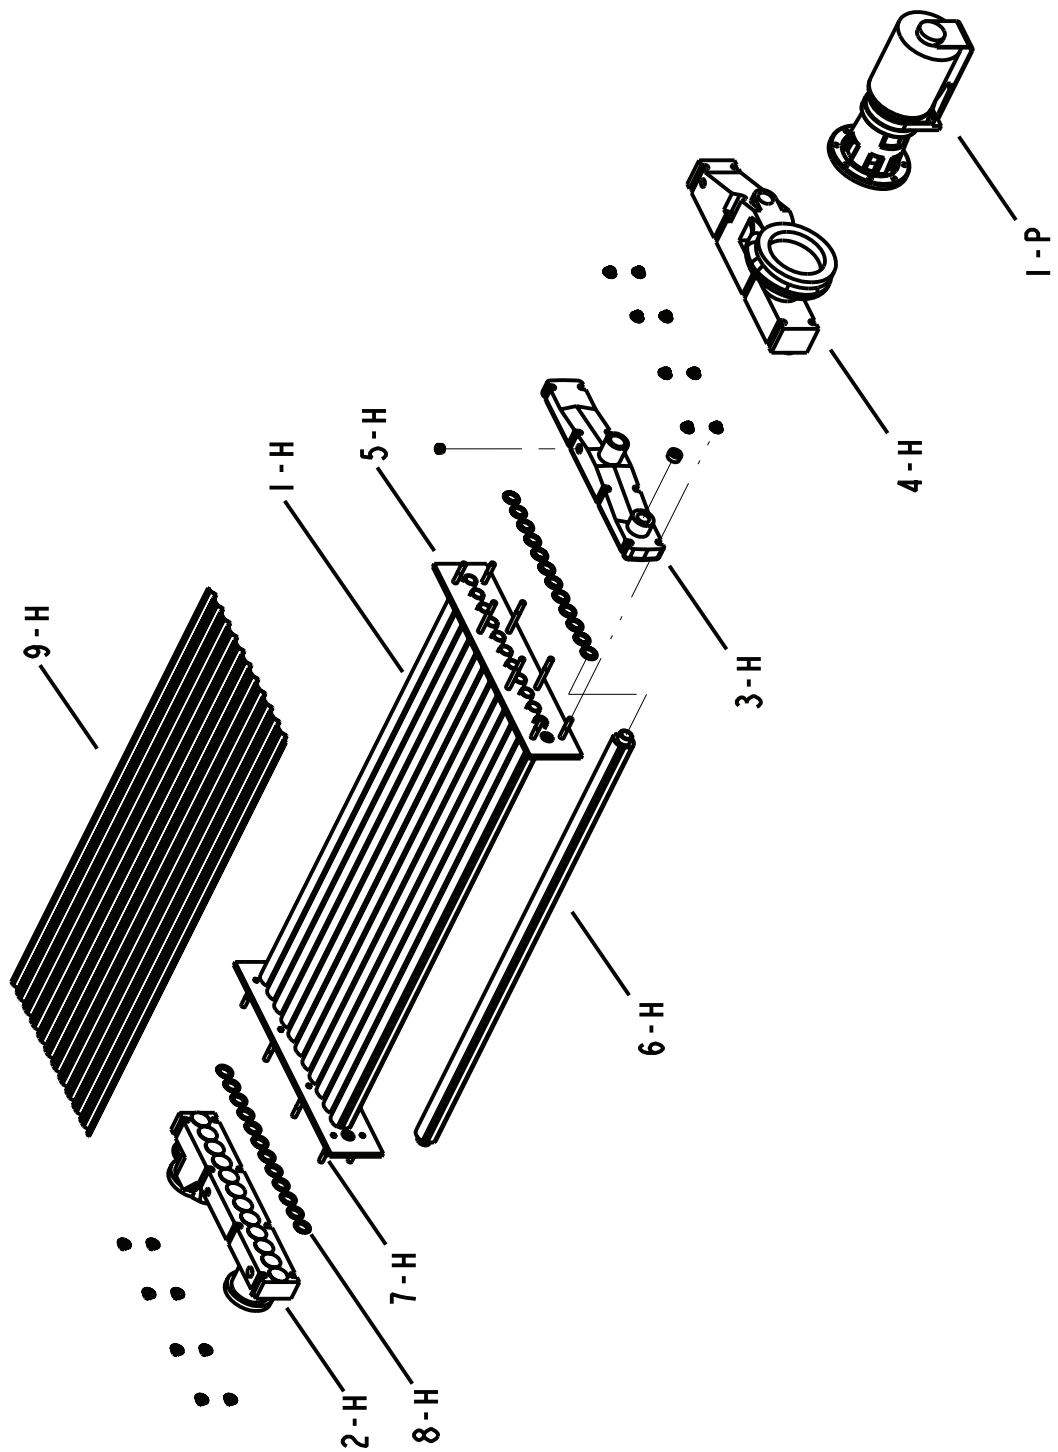


HEAT EXCHANGER DETAIL

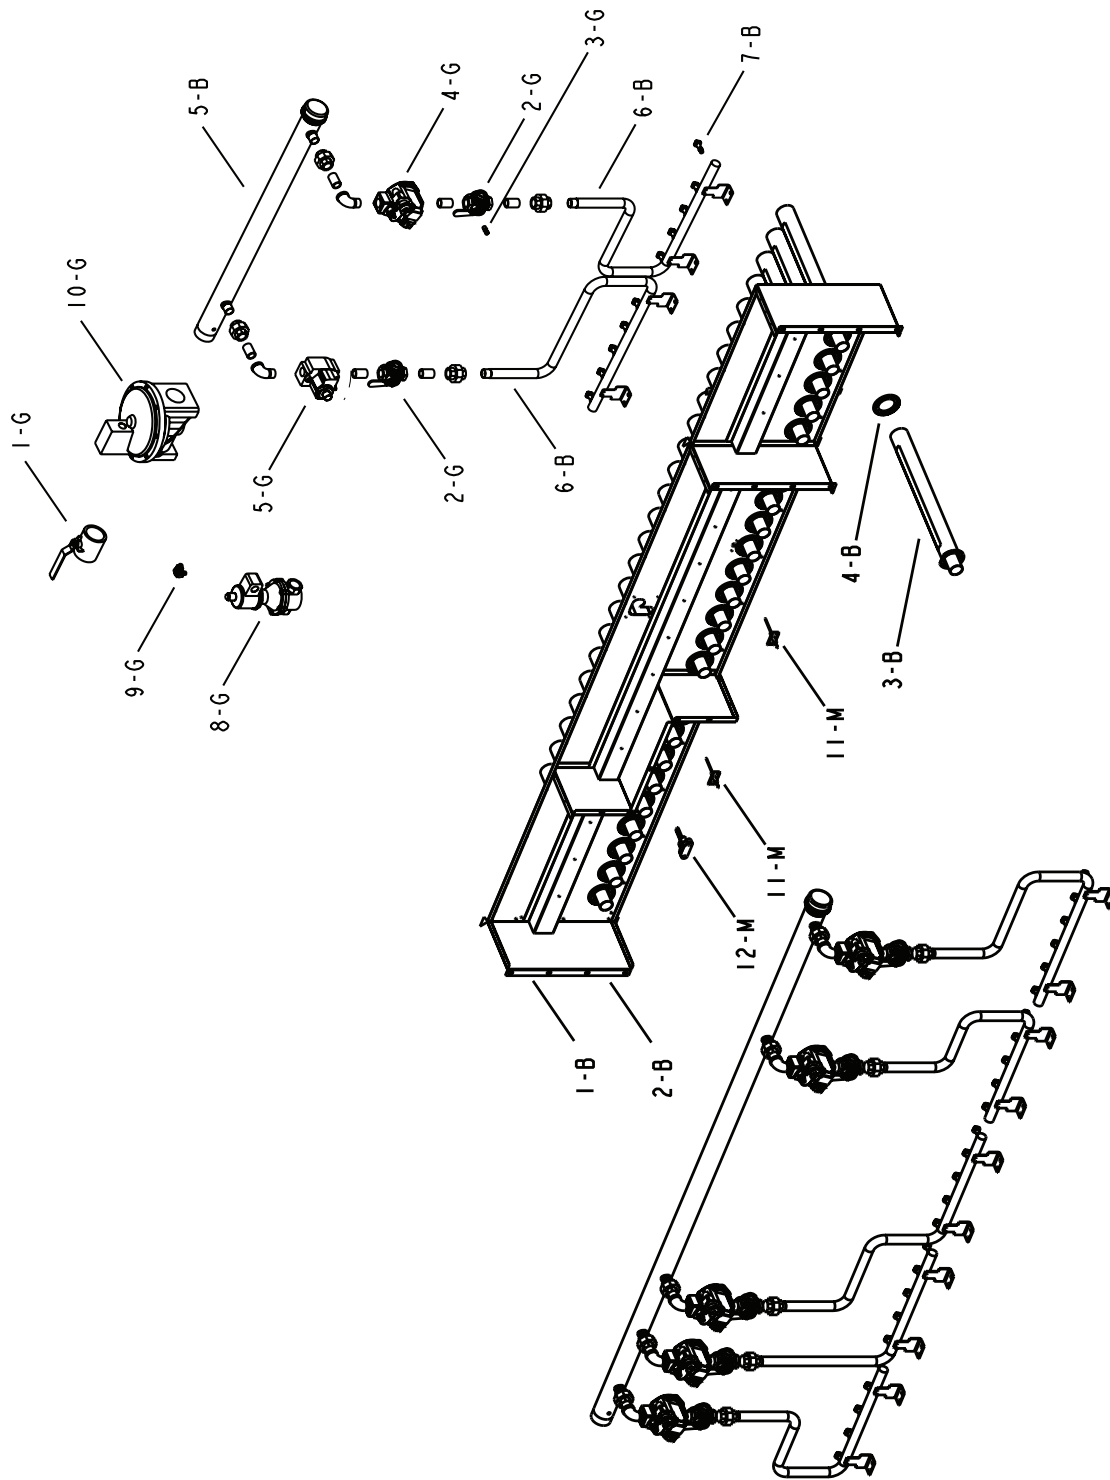

BURNER ASSEMBLY DETAIL

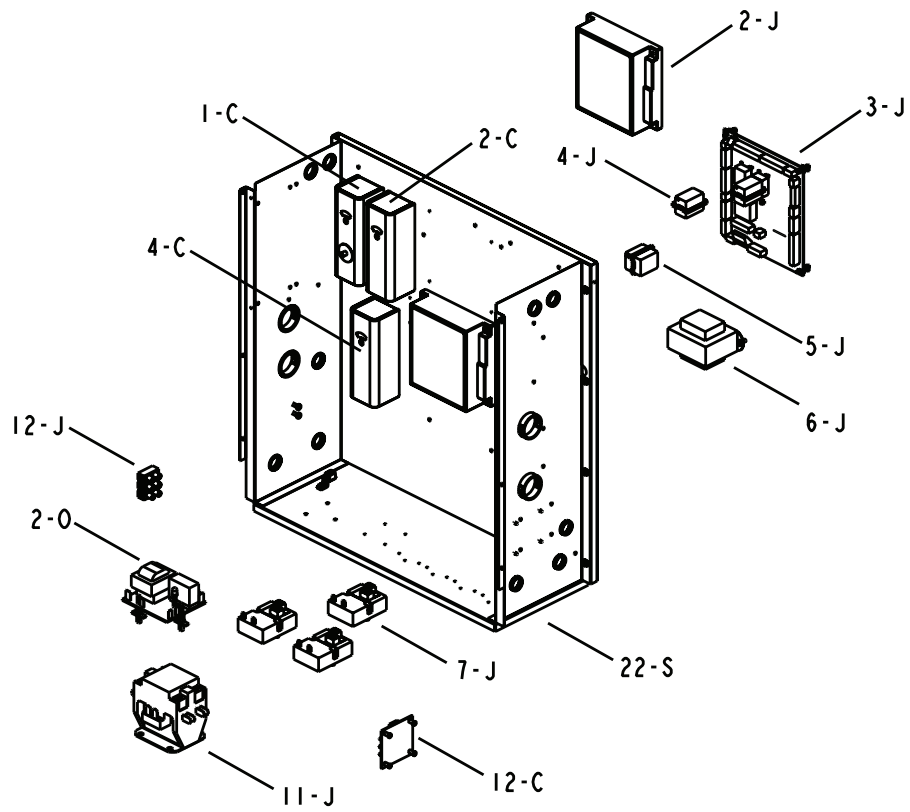

CONTROL BOX DETAIL

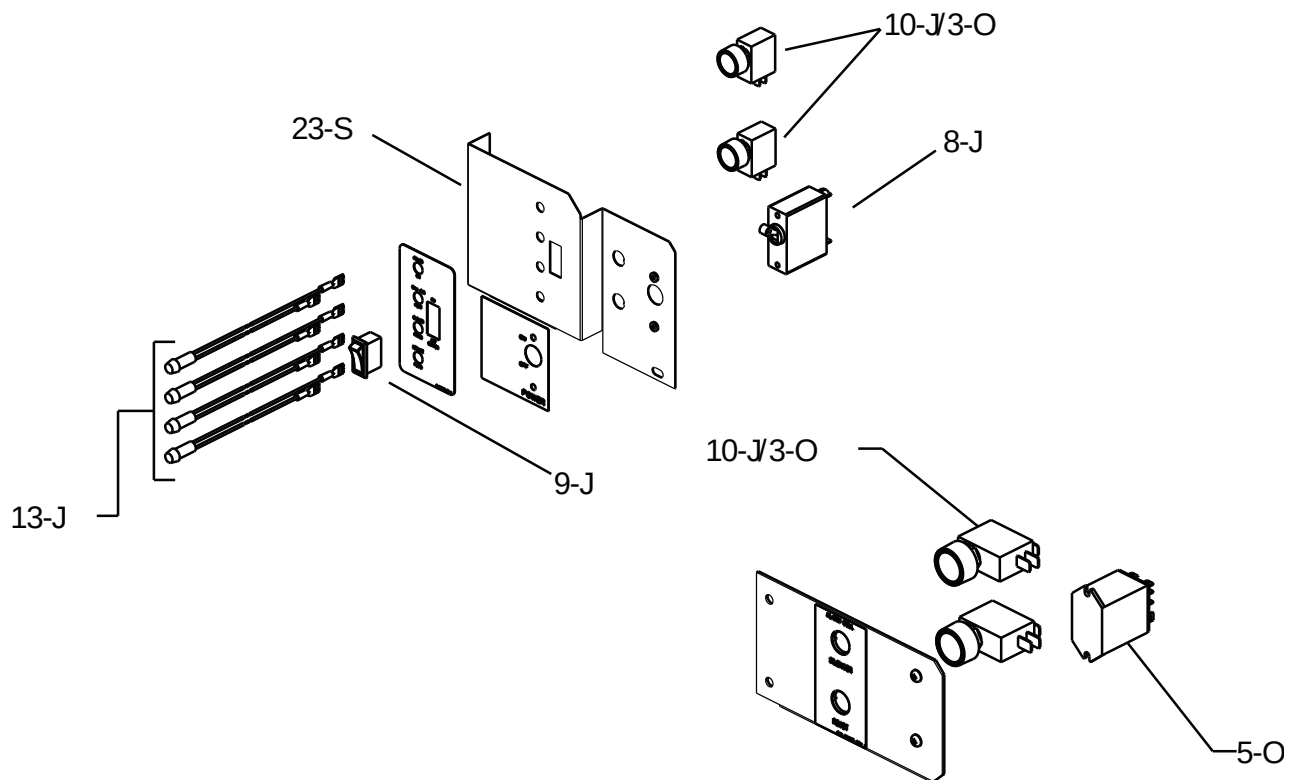

FRONT SWITCH DETAIL

CALL OUT	DESCRIPTION	989B	1259B	1529B	1799B	1999B	2069B	2339B
B	BURNER ASSEMBLY							
1-B	Burner Assy w/Burners	009598F	009599F	009600F	009601F	009602F	009602F	009603F
2-B	Burner Mounting Assy	009604F	009605F	009606F	009607F	009608F	009608F	009609F
3-B	Burner	007617F	007617F	007617F	007617F	007617F	007617F	007617F
4-B	Seal Gasket	007443F	007443F	007443F	007443F	007443F	007443F	007443F
5-B	Manifold Upper	009610F	009611F	009612F	009613F	009614F	009614F	009615F
6-B	Manifold Lower	009616F	009617F	008972F	008973F	008974F	008974F	008975F
7-B	Burner Orifice Nat.# 33	351444 / 11	351444 / 14	351444 / 17	351444 / 20	N/A	351444 / 23	351444 / 26
	Burner Orifice Nat.# 35	N/A	N/A	N/A	N/A	351618 / 23	N/A	N/A
	Burner Orifice Pro.# 52	351445 / 11	351445 / 14	351445 / 17	351445 / 20	N/A	351445 / 23	351445 / 26
C	CONTROLS							
1-C	Manual Reset Adjustable High Limit 240°F Max	007144F	007144F	007144F	007144F	007144F	007144F	007144F
	Manual Reset Adjustable High Limit 200°F Max	008081F	008081F	008081F	008081F	008081F	008081F	008081F
2-C	Auto Reset Adjustable High Limit 240°F Max	007141F	007141F	007141F	007141F	007141F	007141F	007141F
	Auto Reset Adjustable High Limit 180°F Max	006445F	006445F	006445F	006445F	006445F	006445F	006445F
	Auto Reset Adjustable High Limit 200°F Max	012546F	012546F	012546F	012546F	012546F	012546F	012546F
3-C	Remote Aquastat (Tankstat) (B-2)	007148F	007148F	007148F	007148F	007148F	007148F	007148F
	Remote Aquastat (Tankstat) 2-Stage (B-3)	007392F	007392F	007392F	007392F	007392F	007392F	007392F
	Remote Aquastat (Tankstat) 2-Stage (B-9)	007392F	007392F	007392F	007392F	007392F	007392F	007392F
4-C	Controller 2-Stage (B-6)	007392F	007392F	007392F	007392F	007392F	007392F	007392F
5-C	Controller On/Off (B-28) Digital Tekmar	009729F	009729F	009729F	009729F	009729F	009729F	009729F
	Controller 2-Stage (B-26 / 27) Digital Raypak	009861F	009861F	009861F	009861F	009861F	009861F	009861F
	Controller 4-Stage (B-21 / 23) Digital Raypak	009862F	009862F	009862F	009862F	009862F	009862F	009862F
6-C	Sensor Outdoor Air	010786F	010786F	010786F	010786F	010786F	010786F	010786F
7-C	Sensor Water	010787F	010787F	010787F	010787F	010787F	010787F	010787F
8-C	Controller RayTemp (B-25)	010252F	010252F	010252F	010252F	010252F	010252F	010252F
9-C	Sensor Recovery RayTemp	009506F	009506F	009506F	009506F	009506F	009506F	009506F
10-C	Sensor Tank RayTemp	010788F	010788F	010788F	010788F	010788F	010788F	010788F
11-C	Flow Switch	007142F	007142F	007142F	007142F	007142F	007142F	007142F
12-C	Pump Time Delay 5 Minutes Fixed	012342F	012342F	012342F	012342F	012342F	012342F	012342F
13-C	Switch Air Pressure (Vent)	007158F	007158F	007158F	007158F	007158F	007158F	007158F
14-C	Switch Air Pressure Differential (Blower)	008171F	008171F	008171F	008171F	008171F	008171F	008171F
F	FAN							
1-F	Blower Combustion Air (Left Hand)	007413F	007413F	007413F	007413F	007413F	007413F	007413F
2-F	Blower Combustion Air (Right Hand)	007414F	007414F	007414F	007414F	007414F	007414F	007414F
3-F	Air Shutter	009618F	009618F	009618F	009618F	009618F	009618F	009618F
4-F	Filter Media	008402F	008402F	008402F	008402F	008402F	008402F	008402F
G	GAS VALVES							
1-G	Main Valve Gas Manual A 2" (optional)	007665F	007665F	007665F	007665F	007665F	007665F	007665F
2-G	Valve Gas Manual A 3/4" (optional)	007421F	007421F	007421F	007421F	007421F	007421F	007421F
3-G	Bleedle Valve 1/4"	007422F	007422F	007422F	007422F	007422F	007422F	007422F
	Bleedle Valve 1/8"	007423F	007423F	007423F	007423F	007423F	007423F	007423F
4-G	Gas Valve Nat 3/4" Robertshaw 601605	007666F	007666F	007666F	007666F	007666F	007666F	007666F
5-G	Gas Valve Nat 3/4" Honeywell 601561	N/A	007424F	007424F	007424F	007424F	007424F	N/A
	Gas Valve Pro 3/4" Honeywell 601563	007425F	007425F	007425F	007425F	007425F	007425F	007425F
6-G	Switch Low Gas Pressure w/o Bracket	007187F	007187F	007187F	007187F	007187F	007187F	007187F
7-G	Switch High Gas Pressure w/o Bracket (optional)	007188F	007188F	007188F	007188F	007188F	007188F	007188F
8-G	Vent Valve (optional)	011914F	011914F	011914F	011914F	011914F	011914F	011914F
9-G	Valve Gas Manual B (optional)	007195F	007195F	007195F	007195F	007195F	007195F	007195F
10-G	Valve On/Off (optional)	004096F	004096F	004096F	004096F	004096F	004096F	004096F
H	HEAT EXCHANGER							
1-H	Heat Exch Assy Cast Iron	007668F	007669F	007670F	007671F	007672F	007672F	007673F
	Heat Exch Assy Brass	007674F	007675F	007676F	007677F	007678F	007678F	007679F
	Heat Exch Assy Cast Iron w/Pump Hdr	007680F	007681F	007682F	007683F	N/A	N/A	N/A
	Heat Exch Assy Brass w/Pump Hdr	007686F	007687F	007688F	007689F	N/A	N/A	N/A
	Heat Exch Assy Cast Iron Cupro Nickel	007692F	007693F	007694F	007695F	007696F	007696F	007697F
	Heat Exch Assy Brass Cupro Nickel	007698F	007699F	007700F	007701F	007702F	007702F	007703F
	Heat Exch Assy Cast Iron w/Pump Hdr Cupro Nickel	007704F	007705F	007706F	007707F	N/A	N/A	N/A
	Heat Exch Assy Brass w/Pump Hdr Cupro Nickel	007710F	007711F	007712F	007713F	N/A	N/A	N/A
2-H	Inlet/Outlet Header Cast Iron	007716F	007716F	007716F	007716F	007716F	007716F	007716F
	Inlet/Outlet Header Brass	007717F	007717F	007717F	007717F	007717F	007717F	007717F
3-H	Return Header Cast Iron	007718F	007718F	007718F	007718F	007718F	007718F	007718F
	Return Header Brass	007719F	007719F	007719F	007719F	007719F	007719F	007719F
4-H	Return Pump Header Cast Iron	007720F	007720F	007720F	007720F	N/A	N/A	N/A
	Return Pump Header Brass	007721F	007721F	007721F	007721F	N/A	N/A	N/A
5-H	Tube Bundle	007722F	007723F	007724F	007725F	007726F	007726F	007727F
	Tube Bundle Cupro Nickel	007728F	007729F	007730F	007731F	007732F	007732F	007733F
6-H	Heat Exchange Tube	007734F	007735F	007736F	007737F	007738F	007738F	007739F
	Heat Exchange Tube Cupro Nickel	007740F	007741F	007742F	007743F	007744F	007744F	007745F
7-H	Stud Bolt Kit	007828F	007828F	007828F	007828F	007828F	007828F	007828F
	Stud Bolt Kit w/Pump Header	007829F	007829F	007829F	007829F	007829F	007829F	007829F
8-H	Header Gasket	007834F	007834F	007834F	007834F	007834F	007834F	007834F
9-H	Baffle Kit "WH"	007858F	007859F	007860F	007861F	007862F	007862F	007863F
10-H	Sensor Well	007211F	007211F	007211F	007211F	007211F	007211F	007211F
11-H	Well Retaining Clip	300203	300203	300203	300203	300203	300203	300203
J	CONTROL BOX							
1-J	Control Box	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2-J	Ignition Control	007374F	007374F	007374F	007374F	007374F	007374F	007374F
	Ignition Control with Manual Reset	009057F	009057F	009057F	009057F	009057F	009057F	009057F
3-J	Printed Circuit Board CPW	009626F	009626F	012457F	012457F	009688F	009688F	009688F
4-J	Relay DPDT 24VAC (K1, K2 & K5)	009688F	009688F	009688F	009688F	009688F	009688F	009688F
5-J	Relay 3PDT 120VAC (K4)	009689F	009689F	009689F	009689F	009689F	009689F	009689F
6-J	Transformer 100 VA	007494F	007494F	007494F	007494F	007494F	007494F	007494F
7-J	Time Delay Contactor	008921F	008921F	008921F	008921F	008921F	008921F	008921F
8-J	Automatic Shut Down Breaker Switch 30 AMP	007380F	007380F	007380F	007380F	007380F	007380F	007380F
9-J	On/Off Switch Rocker	006872F	006872F	006872F	006872F	006872F	006872F	006872F
10-J	Momentary Switch	005641F	005641F	005641F	005641F	005641F	005641F	005641F
11-J	Contactor DPST 24vac 50A	N/A	009860F	009860F	009860F	009860F	009860F	009860F
12-J	Terminal Block (3 Space)	007382F	007382F	007382F	007382F	007382F	007382F	007382F
13-J	Indicator Lamp	011848F	011848F	011848F	011848F	011848F	011848F	011848F

CALL OUT	DESCRIPTION	989B	1259B	1529B	1799B	1999B	2069B	2339B
M	MISCELLANEOUS							
1-M	Flow Switch Paddle	010026F	010026F	010026F	010026F	010026F	010026F	010026F
2-M	PRV 30 PSI	007748F	007748F	007748F	007748F	008088F	008088F	008088F
	PRV 45 PSI	007221F	007751F	007751F	007752F	007752F	007752F	007752F
	PRV 60 PSI	007222F	007753F	007753F	007754F	007754F	007754F	008288F
	PRV 75 PSI	007223F	007756F	007756F	007756F	007757F	007757F	007757F
	PRV 125 PSI	007224F	007224F	007224F	007758F	007759F	007759F	007759F
	PRV 150 PSI	007225F	007225F	007225F	007225F	007225F	007225F	007225F
3-M	Deliming Kit	052870F	052870F	052870F	052870F	052870F	052870F	052870F
4-M	T & P Gauge (H)	007205F	007205F	007205F	007205F	007205F	007205F	007205F
	T & P Gauge (WH)	007399F	007399F	007399F	007399F	007399F	007399F	007399F
5-M	RTV Sealant 2.8 oz	008924F	008924F	008924F	008924F	008924F	008924F	008924F
	RTV Sealant 10 oz	005755F	005755F	005755F	005755F	005755F	005755F	005755F
6-M	Sealant Tape (gray) Specify Length	800351	800351	800351	800351	800351	800351	800351
7-M	Fiberfrax Insulation 1" Wide	008406F	008406F	008406F	008405F	008405F	008405F	008405F
8-M	Flue Exhaust Tee Seal Gasket	009690F	009691F	009691F	009692F	009692F	009692F	009693F
9-M	Flue Exhaust Adapter Seal Gasket	009635F	009636F	009636F	009637F	009637F	009637F	009638F
10-M	Window Combustion Chamber	006947F	006947F	006947F	006947F	006947F	006947F	006947F
11-M	Flame Sensor	006535F	006535F	006535F	006535F	006535F	006535F	006535F
12-M	Igniter	007400F	007400F	007400F	007400F	007400F	007400F	007400F
13-M	Touch-up Paint							
	Green	750125	750125	750125	750125	750125	750125	750125
	Dark Gray	750126	750126	750126	750126	750126	750126	750126
	Cool Dark Gray	750256	750256	750256	750256	750256	750256	750256
15-M	Sight Window Plug	008474F	008474F	008474F	008474F	008474F	008474F	008474F
16-M	Gas Manifold Grommet 3/4" NPT	010778F	010778F	010778F	010778F	010778F	010778F	010778F
17-M	Gas Manifold Grommet 2" NPT	010780F	010780F	010780F	010780F	010780F	010780F	010780F
O	OPTIONS							
1-O	Remote Sensor for Low Water Cut-Off	007228F	007228F	007228F	007228F	007228F	007228F	007228F
2-O	Low Water Cut Off PC Board	007157F	007157F	007157F	007157F	007157F	007157F	007157F
3-O	Momentary Switch	005641F	005641F	005641F	005641F	005641F	005641F	005641F
4-O	Alarm Bell 3"	005642F	005642F	005642F	005642F	005642F	005642F	005642F
	Alarm Bell 4"	005643F	005643F	005643F	005643F	005643F	005643F	005643F
5-O	Relay DPDT 24V	011720F	011720F	011720F	011720F	011720F	011720F	011720F
P	PUMPS							
1-P	Inline Pumps							
	Bronze (Soft Water)	007227F	007227F	011845F	007348F	007348F	007348F	007351F
	Bronze (Medium Water)	011845F	007348F	007351F	007351F	007937F	007937F	007937F
	Bronze (Hard Water)	007348F	007351F	007351F	007937F	007937F	007937F	007937F
	CI (Soft Water)	007233F	007233F	011846F	007354F	007354F	007354F	007357F
	CI (Medium Water)	011846F	007354F	007357F	007357F	007938F	007938F	007938F
	CI (Hard Water)	007354F	007357F	007357F	007938F	007938F	007938F	007938F
	Integral Header Pump							
	4.0 Impeller	009296F	009296F	N/A	N/A	N/A	N/A	N/A
	4.25 Impeller	004844F	N/A	N/A	N/A	N/A	N/A	N/A
	4.7 Impeller	N/A	N/A	004845F	N/A	N/A	N/A	N/A
2-P	Pump Flange Gasket Taco 1600 Series (Not Shown)							
	Gasket Round (2 Bolt)	013423F	013423F	013423F	013423F	013423F	013423F	013423F
	Gasket Flat (2 Bolt)	013423F	013423F	013423F	013423F	013423F	013423F	013423F
	Gasket Flat (4 Bolt)	N/A	N/A	N/A	014000F	014000F	014000F	014000F
R	REFRACTORY							
1-R	Refractory Kit (All Panels)	007760F	007761F	007762F	007763F	007764F	007764F	007765F
2-R	Refractory Front Panels	007766F	007767F	007768F	007769F	007770F	007770F	007771F
3-R	Refractory Blanket	009869F	009870F	009871F	009872F	009873F	009873F	009874F
S	SHEETMETAL							
1-S	Jacket Top	009629F	009630F	009631F	009632F	009633F	009633F	009634F
2-S	Upfront Control Panel	012345F	012345F	012345F	012345F	012345F	012345F	012345F
3-S	Upper Control Access Jacket Panel	012361F	012362F	012363F	012364F	012365F	012365F	012366F
4-S	Lower Front Jacket Panel	009651F	009652F	009653F	009654F	009655F	009655F	009656F
5-S	Access Panel Igniter/Sensor	N/A	N/A	N/A	N/A	N/A	N/A	N/A
6-S	Lower Rear Jacket Panel	009657F	009658F	009659F	009660F	009661F	009661F	009662F
7-S	Upper Left Side Jacket Panel	009663F	009663F	009663F	009663F	009663F	009663F	009663F
8-S	Upper Right Side Jacket Panel	009695F	009695F	009695F	009695F	009695F	009695F	009695F
9-S	Air Intake Cover Panel	009696F	009696F	009696F	009696F	009696F	009696F	009696F
10-S	Rear Flue Exhaust Cover Panel	009664F	009665F	009665F	009666F	009666F	009666F	009667F
11-S	Flue Exhaust Cover Panel	009713F	009714F	009714F	009715F	009715F	009715F	009716F
12-S	Lower Corner Supports Front and Rear	009668F	009668F	009668F	009668F	009668F	009668F	009668F
13-S	Center Support Panel	010237F	010238F	010239F	010240F	010241F	010241F	010243F
14-S	Left & Right Heat Exchanger Support	010244F	010244F	010244F	010244F	010244F	010244F	010244F
16-S	Support Horizontal	009671F	009672F	009673F	009674F	009675F	009675F	009676F
17-S	Support Assy Controls and Flue Exhaust	009677F	009677F	009677F	009677F	009677F	009677F	009677F
18-S	Flue Collector Top	009678F	009679F	009680F	009681F	009682F	009682F	009683F
19-S	Access Panel	009684F	009684F	009684F	009684F	009684F	009684F	009684F
20-S	Access Panel w/Pump	009685F	009685F	009685F	009685F	009685F	009685F	009685F
21-S	Pump Cover	002671F	002671F	002671F	002671F	002671F	002671F	002671F
22-S	Control Box Sheetmetal	009686F	009686F	009686F	009686F	009686F	009686F	009686F
23-S	Switch Mtg Panel	012343F	012343F	012343F	012343F	012343F	012343F	012343F
24-S	Filter Mounting Panel	009699F	009699F	009699F	009699F	009699F	009699F	009699F
25-S	Intake Air Vent Hood	010747F	010747F	010747F	010747F	010747F	010747F	010747F
26-S	Flue Exhaust Gasket Retainer	010032F	010033F	010033F	010034F	010034F	010034F	010035F
27-S	Combustion Chamber Rear Panel	010772F	010773F	010774F	010775F	010776F	010776F	010777F
28-S	Base Assy	010760F	010761F	010762F	010763F	010764F	010764F	010765F
29-S	Rear Center Cover Panel	011859F	011859F	011859F	011859F	011859F	011859F	011859F
V	VENTING							
1-V	Outdoor Stack	010796	010797	010797	010798	010798	010798	010799
2-V	Flue Exhaust Tee	009701F	009702F	009702F	009703F	009703F	009704F	009704F
3-V	Flue Exhaust Tee Cap	009705F	009706F	009706F	009707F	009707F	009707F	009708F
4-V	Flue Exhaust Adapter	009709F	009710F	009710F	009711F	009711F	009712F	009712F
5-V	Flue Exhaust Straight Pipe	011854F	011855F	011855F	011856F	011856F	011856F	011857F



www.raypak.com